



User manual

**UM EN IB IL 24 LPSDO 8 V3-PAC**

**Order No.: 2992035**

Inline module with integrated safety logic and safe digital outputs

## **User manual**

### **Inline module with integrated safety logic and safe digital outputs**

2013-04-03

---

Designation: UM EN IB IL 24 LPSDO 8 V3-PAC

Revision: 00

Order No.: 2992035

This user manual is valid for:

Designation	Order No.	Revision
IB IL 24 LPSDO 8 V3-PAC	2701625	HW/FW/FW: 00/100/100

---

## Please observe the following notes

### User group of this manual

The use of products described in this manual is oriented exclusively to:

- Qualified electricians or persons instructed by them, who are familiar with applicable standards and other regulations regarding electrical engineering and, in particular, the relevant safety concepts.
- Qualified application programmers and software engineers, who are familiar with the safety concepts of automation technology and applicable standards.

### Explanation of symbols used and signal words



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety measures that follow this symbol to avoid possible injury or death.

There are three different categories of personal injury that are indicated with a signal word.

**DANGER** This indicates a hazardous situation which, if not avoided, will result in death or serious injury.

**WARNING** This indicates a hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION** This indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



This symbol together with the signal word **NOTE** and the accompanying text alert the reader to a situation which may cause damage or malfunction to the device, hardware/software, or surrounding property.



This symbol and the accompanying text provide the reader with additional information or refer to detailed sources of information.

### How to contact us

#### Internet

Up-to-date information on Phoenix Contact products and our Terms and Conditions can be found on the Internet at:

[phoenixcontact.com](http://phoenixcontact.com)

Make sure you always use the latest documentation.

It can be downloaded at:

[phoenixcontact.net/products](http://phoenixcontact.net/products)

#### Subsidiaries

If there are any problems that cannot be solved using the documentation, please contact your Phoenix Contact subsidiary.

Subsidiary contact information is available at [phoenixcontact.com](http://phoenixcontact.com).

#### Published by

PHOENIX CONTACT GmbH & Co. KG  
Flachsmarktstraße 8  
32825 Blomberg  
GERMANY

Should you have any suggestions or recommendations for improvement of the contents and layout of our manuals, please send your comments to:

[tecdoc@phoenixcontact.com](mailto:tecdoc@phoenixcontact.com)

**Please observe the following notes**

---

**General terms and conditions of use for technical documentation**

Phoenix Contact reserves the right to alter, correct, and/or improve the technical documentation and the products described in the technical documentation at its own discretion and without giving prior notice, insofar as this is reasonable for the user. The same applies to any technical changes that serve the purpose of technical progress.

The receipt of technical documentation (in particular user documentation) does not constitute any further duty on the part of Phoenix Contact to furnish information on modifications to products and/or technical documentation. You are responsible to verify the suitability and intended use of the products in your specific application, in particular with regard to observing the applicable standards and regulations. All information made available in the technical data is supplied without any accompanying guarantee, whether expressly mentioned, implied or tacitly assumed.

In general, the provisions of the current standard Terms and Conditions of Phoenix Contact apply exclusively, in particular as concerns any warranty liability.

This manual, including all illustrations contained herein, is copyright protected. Any changes to the contents or the publication of extracts of this document is prohibited.

Phoenix Contact reserves the right to register its own intellectual property rights for the product identifications of Phoenix Contact products that are used here. Registration of such intellectual property rights by third parties is prohibited.

Other product identifications may be afforded legal protection, even where they may not be indicated as such.

# Table of contents

1	For your safety .....	1
1.1	General safety notes.....	1
1.2	Electrical safety .....	3
1.3	Safety of the machine or system.....	4
1.4	Safety when starting applications .....	5
1.5	Directives and standards .....	5
1.6	Correct usage.....	6
1.7	Documentation .....	6
1.8	Abbreviations used .....	7
1.9	Safety hotline.....	7
2	Product description .....	1
2.1	Note about the system description .....	1
2.2	Brief description of the safety module.....	1
2.3	Structure of the safety module .....	2
2.4	Housing dimensions .....	2
2.5	Safe digital outputs .....	3
2.6	Connection options for actuators depending on the parameterization .....	5
2.7	Local diagnostic and status indicators .....	6
2.8	Safe state .....	8
2.8.1	Operating state .....	8
2.8.2	Error detection in I/O devices .....	8
2.8.3	Device errors .....	9
2.8.4	Parameterization errors .....	9
2.9	Process data words .....	10
2.10	Programming data/configuration data.....	10
2.10.1	Local bus .....	10
2.10.2	Other bus systems or networks .....	10
3	Inline potential and data routing, and Inline plugs .....	1
3.1	Inline potential and data routing.....	1
3.2	Supply voltage $U_L$ .....	1
3.3	Supply voltage $U_M$ .....	2
3.4	Terminal point assignment.....	4
4	Assembly, removal, and electrical installation .....	1
4.1	Assembly and removal .....	1
4.1.1	Unpacking the module .....	1
4.1.2	General .....	1
4.1.3	Setting the DIP switches .....	2

4.1.4	Assembly and removal of the safety module .....	4
4.2	Electrical installation .....	6
4.2.1	Electrical installation of the Inline station .....	6
4.2.2	Electrical installation of the safety module .....	6
5	Parameterization of the safety module .....	1
5.1	Parameterization of the safety module in a SafetyBridge system.....	1
5.2	Parameterization of the safe outputs .....	2
5.3	Behavior of the outputs in the event of enabled switch-off delay for stop category 4 .....	4
6	Connection examples for safe outputs .....	1
6.1	Explanation of the examples.....	1
6.2	Notes on the protective circuit for external relays/contactors (freewheeling circuit). .....	2
6.3	Measures required to achieve a specific safety integrity level .....	3
6.4	Single-channel assignment of safe outputs .....	5
6.5	Two-channel assignment of safe outputs .....	8
7	Startup and validation .....	1
7.1	Initial startup .....	1
7.2	Restart after replacing a safety module .....	3
7.2.1	Replacing a safety module .....	3
7.2.2	Restart .....	3
7.3	Validation.....	3
8	Errors: messages and removal .....	1
8.1	Safe digital output errors.....	2
8.2	Supply voltage errors.....	3
8.3	General errors .....	3
8.4	Parameterization errors .....	4
8.5	Connection errors to satellites .....	6
8.6	Acknowledging an error.....	7
9	Maintenance, repair, decommissioning, and disposal .....	1
9.1	Maintenance.....	1
9.2	Repair.....	1
9.3	Decommissioning and disposal.....	1

10	Technical data and ordering data .....	1
10.1	System data .....	1
10.1.1	Inline .....	1
10.1.2	SafetyBridge system .....	1
10.2	IB IL 24 LPSDO 8 V3-PAC.....	1
10.3	Conformance with EMC Directive.....	6
10.4	Ordering data .....	7
10.4.1	Ordering data: safety module .....	7
10.4.2	Ordering data: accessories .....	7
10.4.3	Ordering data: software .....	7
10.4.4	Ordering data: documentation .....	7
A	Appendix: SafetyBridge system.....	1
A 1	The SafetyBridge system .....	1
A 1.1	SafetyBridge technology – maximum flexibility and safety .....	1
A 1.2	Overview of SafetyBridge system features .....	2
A 1.3	Differences in SafetyBridge systems depending upon which module with integrated safety logic is used .....	2
A 2	System topology .....	5
A 2.1	General topology .....	5
A 2.2	Network and controller requirements .....	6
A 2.3	Safe input and output devices .....	6
A 2.4	Cross communication .....	7
A 3	SafetyBridge address assignment .....	12
A 4	SafetyBridge V3 system handling in various control systems.....	16
A 5	Enable principle.....	16
A 6	Diagnostics.....	18
A 6.1	Error detection in I/O devices .....	18
A 6.2	Detection of device errors .....	19
A 6.3	Acknowledgment of error messages for satellites .....	19
A 7	Configuration, parameterization, and download .....	20
A 7.1	Configuration and parameterization using the SAFECONF software tool .....	20
A 7.2	Downloading the configuration and parameter data record .....	21
A 8	Safe state .....	21
A 9	Time response in the SafetyBridge system .....	22
A 9.1	Typical response time .....	22
A 9.2	Shutdown times .....	23
A 10	Achievable safety depending on the modules used.....	25
A 11	Behavior in the event of an error .....	26
A 11.1	Critical system or device errors .....	26
A 11.2	Parameterization or configuration errors .....	27

## Product designation

---

A 11.3	Communication errors .....	27
A 11.4	I/O errors .....	27
A 11.5	Application errors .....	28
A 12	Startup and restart.....	28
A 12.1	Startup/restart following power up .....	28
A 12.2	Restart after triggering a safety function .....	28
A 13	Memory sizes for the safety logic.....	28
B	Appendix: checklists.....	1
B 1	Checklists for the SafetyBridge system .....	2
B 1.1	Planning .....	2
B 1.2	Configuration and parameterization .....	4
B 1.3	Startup .....	5
B 1.4	Safety functions .....	6
B 1.5	Validation .....	7
B 2	Checklists for the IB IL 24 LPSDO 8 V3-PAC module.....	8
B 2.1	Planning .....	8
B 2.2	Assembly and electrical installation .....	9
B 2.3	Startup .....	10
B 2.4	Validation .....	11
C	Appendix: revision history.....	1



# 1 For your safety

## Purpose of this manual

The information in this document is designed to familiarize you with how the IB IL 24 LPSDO 8 V3-PAC safety module works, its operating and connection elements, and its parameter settings. This information will enable you to use the module within a SafetyBridge system according to your requirements.

## Validity of the user manual

This manual is only valid for the IB IL 24 LPSDO 8 V3-PAC module in the version indicated on the inner cover page.

## 1.1 General safety notes



**WARNING: Depending on the application, incorrect handling of the safety module can pose serious risks for the user**

When working with the safety module within the SafetyBridge system, please observe all the safety notes included in this section.

### Requirements

Knowledge of the following is required:

- The target system (e.g., INTERBUS, PROFIBUS, PROFINET, EtherNET/IP™)
- The standard control system
- The SafetyBridge system (see Appendix A)
- The components used in your application
- The Inline product range
- Operation of the software tools used
- Safety regulations in the field of application

### Qualified personnel

In the context of the use of the SafetyBridge system, the following operations may only be carried out by qualified personnel:

- Planning
- Configuration of the safety logic and parameterization
- Installation, startup, servicing
- Maintenance, decommissioning

This user manual is therefore aimed at:

- Qualified personnel who plan and design safety equipment for machines and systems and are familiar with regulations governing occupational safety and accident prevention.
- Qualified personnel who install and operate safety equipment in machines and systems.

In terms of the safety notes in this manual, qualified personnel are persons who, because of their education, experience and instruction, and their knowledge of relevant standards, regulations, accident prevention, and service conditions, have been authorized to carry out any required operations, and who are able to recognize and avoid any possible dangers.

<b>Documentation</b>	You must observe all information in this manual as well as in the documents listed in Section "Documentation" on page 1-6.
<b>Safety of personnel and equipment</b>	The safety of personnel and equipment can only be assured if the safety module is used correctly (see Section "Correct usage" on page 1-6).
<b>Error detection</b>	Depending on the wiring and the corresponding setting of the safe output module parameters, the SafetyBridge system can detect various errors within the safety equipment.
<b>Do not carry out any repairs</b>	Repair work may not be carried out on the safety module. In the event that an error cannot be removed, please contact Phoenix Contact immediately, engage a service engineer or send the faulty module directly to Phoenix Contact.
<b>Do not open the housing/security seal</b>	It is strictly prohibited to open the safety module housing. In order to prevent the manipulation of the safety module and to detect the unauthorized opening of the safety module, a security seal is applied to the module. This security seal is damaged in the event of unauthorized opening. In this case, the correct operation of the safety module can no longer be ensured.
<b>Measures to prevent incorrect connection and polarity reversal</b>	Take measures to prevent the incorrect connection, polarity reversal, and manipulation of connections.

## 1.2 Electrical safety

**WARNING: Hazardous shock currents and the loss of functional safety**

Disregarding instructions for electrical safety may result in hazardous shock currents and the loss of functional safety.

In order to ensure electrical safety, please observe the following points.

**Direct/indirect contact**

Ensure that all components connected to the system are protected against direct and indirect contact according to VDE 0100 Part 410. In the event of an error, parasitic voltages must not occur (single-fault tolerance).

This can be achieved by:

- Using power supply units with safe isolation (PELV).
- Decoupling circuits, which are not SELV or PELV systems, using optocouplers, relays, and other components, which meet the requirements of safe isolation.

**Power supply unit for 24 V supply**

Only use power supply units with safe isolation and PELV according to EN 50178/VDE 0160 (PELV). This prevents short circuits between primary and secondary sides.

Make sure that the output voltage of the power supply does not exceed 32 V even in the event of an error.

**Insulation rating**

When selecting the equipment, please take into consideration the contamination and surge voltages which may occur during operation.

The IB IL 24 LPSDO 8 V3-PAC module is designed for surge voltage category II (according to DIN EN 60664-1). If you expect surge voltages in the system, which exceed the values defined in surge voltage category II, take into consideration additional measures for voltage limitation.

**Installation and configuration**

Please observe the instructions for installing and configuring the system (see Section "Documentation" on page 1-6).

**WARNING: Depending on the application, incorrect installation and upgrades can pose serious risks for the user**

The user is obliged to design the devices used and their installation in the system according to these requirements. This also means that existing plants and systems retrofitted with the SafetyBridge system must be checked and tested again in this respect.

### 1.3 Safety of the machine or system

The machine/system manufacturer and the operator are solely responsible for the safety of the machine or system and the implemented application, in which the machine or system is used. The Machinery Directive must be observed.

#### Draw up and implement a safety concept

In order to use the safety module described in this document, you must have drawn up an appropriate safety concept for your machine or system. This includes a hazard and risk analysis according to the directives and standards specified in Section "Directives and standards" on page 1-5, as well as a test report (checklist) for validating the safety function (see "Appendix: checklists" on page B-1).

The target safety integrity level (SIL according to IEC 61508-2, SIL CL according to EN 62061 or performance level and category according to EN ISO 13849-1) is ascertained on the basis of the risk analysis. The safety integrity level ascertained determines how to connect and parameterize the safety module within the overall safety function.

Within a SafetyBridge system, the IB IL 24 LPSDO 8 V3-PAC safety module can be used to achieve safety functions with the following requirements depending on the conditions of use:

- Up to SIL 3 according to standard IEC 61508-2
- Up to SIL CL 3 according to standard EN 62061
- Up to Cat. 4/PL e according to standard EN ISO 13849-1



Please also refer to Section "Achievable safety depending on the modules used" on page A-25.

#### Check hardware and parameterization

Carry out a **validation** every time you make a safety-related modification to your overall system.

Use your test report to ensure that:

- The safe devices are connected to the correct safe sensors and actuators
- The safe input and output devices have been parameterized correctly
- The safety functions have been wired correctly

## 1.4 Safety when starting applications

Take the following into consideration when determining the start conditions for your machine or system:

- The machine or system may only be started if it has been ensured that no one is present in the danger zone.
- Meet the requirements of EN ISO 13849-1 with regard to the manual reset function.

This applies to:

- Switching on safe devices
- Acknowledging device error messages
- Acknowledging communication errors
- Acknowledging block error messages in the application
- Removing startup inhibits for safety functions

Observe your safety logic during programming/configuration:

- Switching from the safe state (substitute value = 0) to the operating state can generate an edge change (zero/one edge).
- In the safety logic, take measures to prevent this edge change resulting in unexpected machine/system startup or restart.

## 1.5 Directives and standards

The manufacturers and operators of machines and systems, in which the IB IL 24 LPSDO 8 V3-PAC module is used, are responsible for adhering to all applicable directives and legislation.

For the standards observed by the module, please refer to the certificate issued by the approval body and the EC declaration of conformity. These documents are available on the Internet at [www.phoenixcontact.net/products](http://www.phoenixcontact.net/products).

## 1.6 Correct usage

Only use the SafetyBridge system in accordance with the instructions in this section.

The IB IL 24 LPSDO 8 V3-PAC safety module is designed exclusively for use in a SafetyBridge system.

It can only perform its safety-related tasks within the system if it has been integrated into the execution process correctly and in such a way as to avoid errors.

You must observe all information in this manual as well as in the documents listed in “Documentation” on page 1-6. In particular, only use the module according to the technical data and ambient conditions specified in Section 10, “Technical data and ordering data” on page 10-1 and onwards.

Within a SafetyBridge system, the safety module can be used to achieve safety functions with the following requirements depending on the conditions of use:

- Up to SIL 3 according to standard IEC 61508-2
- Up to SIL CL 3 according to standard EN 62061
- Up to Cat. 4/PL e according to standard EN ISO 13849-1



Please also refer to Section “Achievable safety depending on the modules used” on page A-25.

The safety module is designed for connecting single-channel or two-channel actuators, which can be used in association with safety technology.

For example, the module can be used in the following applications:

- Safety circuits according to EN 60204 Part 1
- Safe shutdown of contactors, motors (24 V DC), valves, ohmic, inductive, and capacitive loads

The module is **not** suitable for applications in which stop category 1 also has to be observed in the event of an error (see also Section “Behavior of the outputs in the event of enabled switch-off delay for stop category 1” on page 5-4).

## 1.7 Documentation

### Latest documentation

Make sure you always use the latest documentation. Changes or additions to this document can be found on the Internet at [www.phoenixcontact.net/products](http://www.phoenixcontact.net/products).

### SafetyBridge system

When working on the SafetyBridge system and its components, you must always keep this user manual and other items of product documentation to hand and observe the information therein.

User manuals:

- For the controller used
- For SafetyBridge system I/O modules
- For SafetyBridge system functional blocks

Please also observe the relevant information about the bus system used.

### Inline product range

IL SYS INST UM E

Automation terminals of the Inline product range (configuration and installation)

Documentation for the bus coupler used

## 1.8 Abbreviations used

Table 1-1 Abbreviations used

Abbreviation	Meaning	Standard	Example
SIL	Safety integrity level	IEC 61508-2	SIL 2, SIL 3
SIL CL	SIL claim limit	EN 62061	SIL CL 3
Cat.	Category	EN ISO 13849-1	Cat. 2, Cat. 4
PL	Performance level	EN ISO 13849-1	PL e, PL d

Table 1-2 Abbreviations used

Abbreviation	Meaning
PELV	<p>Protective extra-low voltage</p> <p>A circuit in which the voltage cannot exceed 30 V AC, 42.4 V peak value or 60 V DC under normal conditions, and under single-fault conditions, except in the event of grounding errors in other circuits.</p> <p>A PELV circuit is like a SELV circuit, but is connected to protective earth ground.</p> <p>(According to EN 61131-2)</p>
EUC	Equipment under control

## 1.9 Safety hotline

Should you have any technical questions, please contact our 24-hour hotline.

Phone: + 49 5281 9-462777

E-mail: [safety-service@phoenixcontact.com](mailto:safety-service@phoenixcontact.com)

## 2 Product description

### 2.1 Note about the system description

The SafetyBridge system is described in “Appendix: SafetyBridge system” on page A-1.

In the description of the IB IL 24 LPSDO 8 V3-PAC safety module, it is assumed that you are familiar with the SafetyBridge system. If this is not the case, please refer to Appendix A first for information on the system.

### 2.2 Brief description of the safety module

The IB IL 24 LPSDO 8 V3-PAC module is designed for use within an Inline station. The module features integrated configurable safety logic and safe digital outputs.

The IB IL 24 LPSDO 8 V3-PAC safety module can be used as part of an Inline station at any point within a SafetyBridge system.

The transmission speed of the Inline local bus can be set to 500 kbaud or 2 Mbaud on the safety module using switches.

Use the same transmission speed throughout an Inline station.

The module has a 10-pos. DIP switch, which is used to set the island number.

The module has four safe positive switching digital outputs for two-channel assignment or eight safe positive switching digital outputs for single-channel assignment.

The outputs can be parameterized according to the application. The outputs enable actuators to be integrated into the SafetyBridge system.

Within a SafetyBridge system, the IB IL 24 LPSDO 8 V3-PAC safety module can be used to achieve safety functions with the following requirements:

- Up to SIL 3 according to standard IEC 61508-2
- Up to SIL CL 3 according to standard EN 62061
- Up to Cat. 4/PL e according to standard EN ISO 13849-1



Please also refer to Section “Achievable safety depending on the modules used” on page A-25.



## 2.3 Structure of the safety module

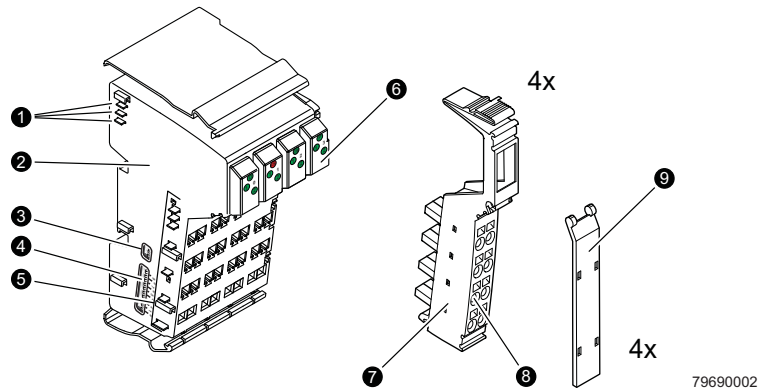


Figure 2-1 Structure of the safety module

- 1 Data jumpers (local bus)
- 2 Electronics base with labeling including hardware/firmware/firmware version designation (not shown)
- 3 Switch for setting the transmission speed
- 4 Switch for setting the island number
- 5 Potential jumper
- 6 Diagnostic and status indicators; for assignment and meaning see Section “Local diagnostic and status indicators” on page 2-6
- 7 Inline plug; for assignment see Section “Terminal point assignment” on page 3-4
- 8 Terminal points
- 9 Marking field

## 2.4 Housing dimensions

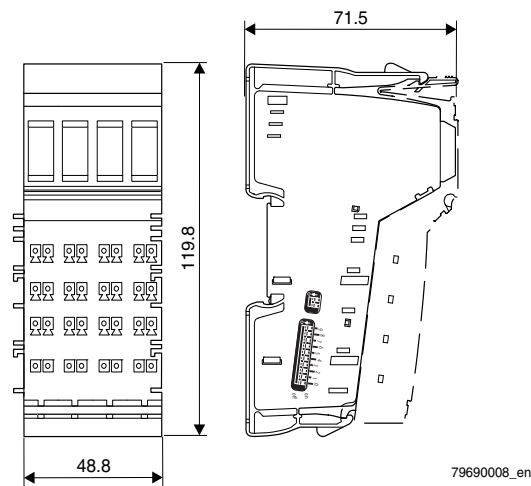


Figure 2-2 Housing dimensions (in mm)

## 2.5 Safe digital outputs

The safety module has safe positive switching digital outputs, which can be used as follows:

- For two-channel assignment:
  - Four two-channel outputs
- For single-channel assignment:
  - Eight single-channel outputs

### Technical data

For the technical data for the safe outputs, please refer to page 10-4.

### Parameterization

The individual safe digital outputs of a safety module can be parameterized differently. This means that the outputs can be adapted to various operating conditions and different safety integrity levels (SIL, SIL CL, Cat., PL) can be implemented.

In order to achieve a high level of error detection, the test pulses must be enabled. If this is not possible for the connected loads, the test pulses can be disabled. However, in this case error detection is reduced.



The safety integrity level (SIL, SIL CL, Cat., PL) and error detection that can be achieved depend on the parameterization, the structure of the actuator, and the cable installation (see "Connection examples for safe outputs" on page 6-1).

For information on parameterization, please refer to Section "Parameterization of the safe outputs" on page 5-2.

### Diagnostics

Diagnostics are provided via both the local diagnostic indicators and the diagnostic messages, which are transmitted to the controller.

For information on the diagnostic messages of the outputs, please refer to Section "Safe digital output errors" on page 8-2.



**CAUTION: Diagnostic data is not safety-related**

The diagnostic data is not safety-related. This data must not be used to execute safety-related functions or actions.

**Requirements for controlled devices/actuators**

The error detection of the module varies depending on the parameterization. This results in specific requirements for the actuators.

- If the outputs are parameterized with test pulses, the output circuits are tested by test pulses at regular intervals. These test pulses are visible at the output and can trigger undesirable reactions with quick responding actuators.



**WARNING: Unintentional machine startup**

If the process does not tolerate this behavior, actuators with sufficient inertia must be used.

In general, the load must not be so dynamic that it causes dangerous states within 1 ms.

Quick actuators, which offer a safety-related response to pulses in under 1 ms, may **not generally** be used.

Switching off the test pulses affects the error detection of the module. Please observe the achievable safety integrity level, which is specified in Section “Connection examples for safe outputs” on page 6-1.

The failure detection time is 20 ms.



Please refer to “Single-channel assignment of safe outputs” on page 6-5 and “Two-channel assignment of safe outputs” on page 6-8 for additional information.

- Only use appropriately qualified actuators.
- Use reliable components. These include, for example:
  - Control contactors according to EN 60947-4-1
  - Power contactors
  - Relays with forcibly guided contacts according to DIN EN 50205
- Use relays or contactors with forcibly guided N/C contacts to safely monitor the state (pick-up, drop-out).
- Please observe any special environmental requirements in your application when selecting the controlled devices.
- Please observe the applicable C standards in your application (e.g., EN 1010), in which, for example, the number of controlled devices required to achieve a particular category is specified.

## 2.6 Connection options for actuators depending on the parameterization

Actuators that meet various safety requirements depending on the parameterization can be connected to the outputs. For connection examples, please refer to Section 6, "Connection examples for safe outputs".

The maximum achievable SIL/SIL CL/Cat./PL is specified in the table.

In order to achieve this:

- Observe the information in the connection examples (see Section 6, "Connection examples for safe outputs")
- Observe the requirements of the standards with regard to the external wiring and the actuators to be used to achieve a SIL/SIL CL/Cat./PL (see "Measures required to achieve a specific safety integrity level" on page 6-3)

"Output" parameterization	Output OUT0 to OUT3	
	Single-channel	Two-channel
Test pulses	Any	ON/OFF*
Achievable category	SIL 2/SIL CL 2/Cat. 3/PL d	SIL 3/SIL CL 3/Cat. 4/PL e
For connection example, see page	6-5	6-8

Key:

- \* If the test pulses are disabled, a cross circuit between the outputs is only detected if the output is enabled.



To achieve Cat. 3, two-channel actuators are usually used.

## 2.7 Local diagnostic and status indicators

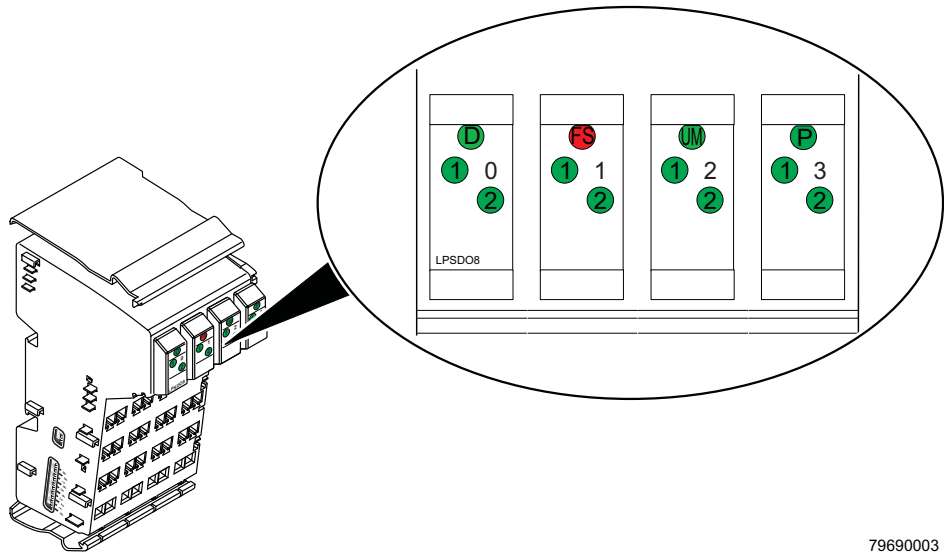


Figure 2-3 Local diagnostic and status indicators of the IB IL 24 LPSDO 8 V3-PAC module

79690003

Table 2-1 Local diagnostic and status indicators



<b>D</b>	Green LED	Diagnostics
	OFF:	Communications power not present
	Flashing at 0.5 Hz:	Communications power present, local bus not active
	Flashing at 4 Hz:	Communications power present, error at the interface between previous and flashing terminal (the terminals after the flashing terminal cannot be addressed). (E.g., loose contact at the bus interface, terminal before the flashing terminal has failed, another terminal was snapped on during operation (not permitted))
	 Observe the module startup time of approximately 20 s. During this time the D LED flashes at 4 Hz and the bus cannot be started up.	
ON:	Communications power present, local bus active	
<b>FS</b>	Red LED	Failure state
	Flashing at 1 Hz:	Device not parameterized or parameterization was not accepted
	ON:	Hardware fault The output drivers are reset, there is no communication to the satellites. <b>Or:</b> Impermissible switch position The module will respond to certain impermissible switch positions by entering the failure state immediately after power up.

Table 2-1 Local diagnostic and status indicators (continued)

<b>UM</b>	Green LED	Monitoring the supply voltage $U_M$
	OFF:	Communications power not present or firmware has not started up yet
	Flashing at 1 Hz:	$U_M$ below the permissible voltage range (undervoltage)
	ON:	$U_M$ present
<b>P</b>	Green LED	Status indicator for communication
	OFF:	IB IL 24 LPSDO 8 V3-PAC not parameterized
	Flashing at 0.5 Hz:	IB IL 24 LPSDO 8 V3-PAC is parameterized, but safe communication is not running to at least one satellite
	ON:	Communication OK  IB IL 24 LPSDO 8 V3-PAC is parameterized and safe communication is running without any errors to all configured satellites.  If no satellites have been configured: IB IL 24 LPSDO 8 V3-PAC is parameterized.  Corresponds to COK bit = 1
<b>OUT 0.1 - 3.2</b>	Green/red LED	Status of each output (see "Terminal point assignment" on page 3-4)
	Green:	Output at logic 1
	OFF:	Output at logic 0, no error
	Red ON:	Short circuit/overload of an output (This diagnostic message is stored temporarily on the module. The message is stored in the volatile memory and will be lost after a voltage reset.)
		In the event of an error (red LED ON), the output is switched off until the acknowledgment sent by the controller is received by the safety module (see also Section "Safe digital output errors" on page 8-2).

## 2.8 Safe state

The safe state for the module is the low state at the output terminals (see Section “Safe digital outputs” on page 2-3).

The safe state can be entered in the following cases:

1. Operating state
2. Error detection in I/O devices
3. Device errors
4. Parameterization errors
5. Error detection during safe communication

### 2.8.1 Operating state

In the operating state, the outputs can enter states “1” or “0”. In general, state “0” is the safe state.



**WARNING: Loss of the safety function possible due to undetected accumulation of errors**

Also evaluate the diagnostics of modules that are not used, but are connected to the power supply, at regular intervals or disconnect these modules from the supply voltage.

### 2.8.2 Error detection in I/O devices

#### Outputs

If an error is detected at an output, the affected output is disabled (“0” = OFF = safe state).

Depending on the parameterization, the following errors can be detected at outputs:

- Short circuit
- Cross circuit
- Overload

The relevant diagnostic message is transmitted to the controller (see Section “Safe digital output errors” on page 8-2). For information on which errors are detected and when, please refer to “Connection examples for safe outputs” on page 6-1.



If an error occurs on a channel of an output parameterized as “two-channel”, the other corresponding channel also enters the safe state.

### 2.8.3 Device errors

#### Outputs

If a hardware fault in the internal circuit is detected at an output, **all** module outputs are disabled ("0" = OFF = safe state).

The relevant diagnostic message is transmitted to the controller (see Section "Safe digital output errors" on page 8-2).

#### Serious errors

All serious errors that can result in the loss of or adversely affect the safety function cause the entire module to enter the safe state. The FS LED on the safety module is permanently on.

##### The following errors result in the safe state:

- Serious hardware faults in the internal circuit
- User errors
- Module overload
- Module overheating
- Faulty supply voltage
- Impermissible switch position of DIP switches

The relevant diagnostic message is transmitted to the controller where technically possible (see Section "Errors: messages and removal" on page 8-1).

**WARNING: Loss of the safety function due to sequential errors**

In the event of a device error, the following measures should be taken to prevent sequential errors:

Disconnect the module from the power supply after eight hours at most and replace it.

### 2.8.4 Parameterization errors

Parameterization errors are indicated:

- As long as the module is not parameterized

or

- In the event of faulty parameterization

Parameterization errors cause the entire module to enter the safe state. The FS LED on the safety module flashes.

In the event of faulty parameterization, the relevant diagnostic message is transmitted to the controller (see Section "Parameterization errors" on page 8-4).



## 2.9 Process data words

The module occupies 24 words in the Inline system. Use electronic device descriptions (GSD, GSDML, FDCML, etc.) in order to use the module in various networks.

## 2.10 Programming data/configuration data

### 2.10.1 Local bus

Operating mode	SafetyBridge V3
ID code	AB <sub>hex</sub> (171 <sub>dec</sub> )
Length code	18 <sub>hex</sub> (24 <sub>dec</sub> )
Input address area	Application-specific
Output address area	Application-specific
Parameter channel (PCP)	0 words
Register length	24 words

### 2.10.2 Other bus systems or networks



The programming data/configuration data is defined in the device description (FDCML, GSD, GSDML, etc.) according to the bus or network used.

## 3 Inline potential and data routing, and Inline plugs

### 3.1 Inline potential and data routing

For operation, the safety module must be integrated in an Inline station within the SafetyBridge system.

The bus signals are transmitted via the Inline data jumpers. The required supply voltages are transmitted via the Inline potential jumpers.



For more detailed information on potential and data routing within an Inline station, please refer to the IL SYS INST UM E user manual.

The segment circuit is looped through the safety module and is available again after the module. The segment circuit cannot be accessed in the safety module.

### 3.2 Supply voltage $U_L$

Supply the 24 V supply voltage  $U_{BK}/U_{24V}$  at a bus coupler or a suitable power terminal (IB IL 24 PWR IN/R). The 7.5 V voltage  $U_L$  is generated from this 24 V supply voltage in the bus coupler or power terminal. It is supplied to the safety module via the Inline potential jumper  $U_L$ .



**WARNING: Loss of the safety function when using unsuitable power supplies**

Please note for the voltage supply at the bus coupler or power terminal that:  
Only power supplies according to EN 50178/VDE 0160 (PELV) may be used.  
Please also observe the points in Section "Electrical safety" on page 1-3.

The supply voltage  $U_L$  is used to supply the bus controller board and the communications power. For the technical data for the supply voltage  $U_L$ , please refer to "Supply voltage  $U_L$  (logic)" on page 10-3.

The maximum current carrying capacity for the supply voltage  $U_L$  is 2 A.  
This current carrying capacity can be reduced if certain terminals are used. Please refer to the information in the terminal-specific data sheets.

### 3.3 Supply voltage $U_M$

Supply the supply voltage at a bus coupler or a power terminal. It is supplied to the safety module via the Inline potential jumper  $U_M$ .



**WARNING: Loss of the safety function when using unsuitable power supplies**

Please note for the voltage supply at the bus coupler or power terminal that: Only power supplies according to EN 50178/VDE 0160 (PELV) may be used. Please also observe the points in Section “Electrical safety” on page 1-3.

The supply voltage  $U_M$  is used to supply the output circuits. For the technical data for the supply voltage  $U_M$ , please refer to Section “Supply voltage  $U_M$  (actuators)” on page 10-3.

The maximum current carrying capacity for the main circuit  $U_M$  is 8 A (total current with the segment circuit that is not used in the safety terminal). This current carrying capacity can be reduced if certain terminals are used. Please refer to the information in the terminal-specific data sheets.


If the limit value of the potential jumpers  $U_M$  and  $U_S$  is reached (total current of  $U_S$  and  $U_M$ ), a new power terminal must be used.



**NOTE: Module damage due to polarity reversal**

Polarity reversal places a burden on the electronics and, despite protection against polarity reversal, can damage the module. Therefore, polarity reversal must be prevented.

For the behavior of the safety module in the event of an error at the supply voltage, please refer to Section “Supply voltage errors” on page 8-3.

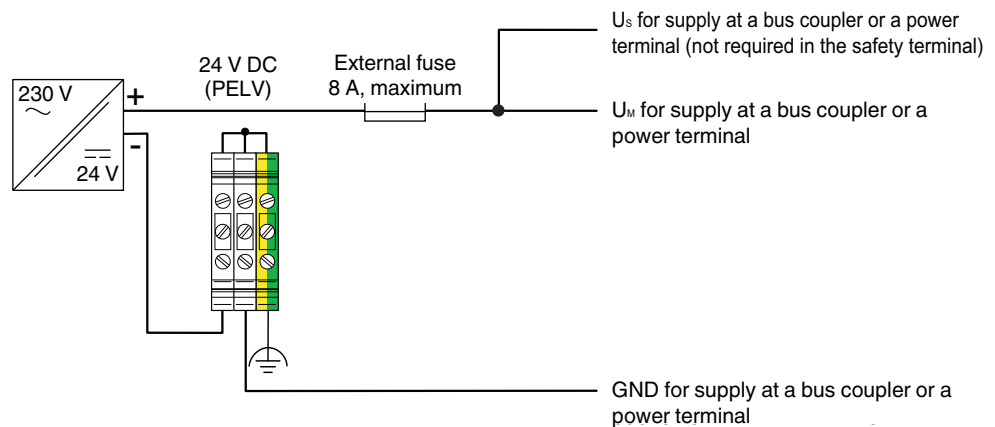

76191004

Figure 3-1 Supply  $U_M$  with connection to functional earth ground according to EN 60204-1



**WARNING: Loss of functional safety due to parasitic voltages**

Supply the supply voltages  $U_M$  and  $U_S$  at a bus coupler and/or a power terminal from the same power supply unit, so that the loads of IB IL 24 LPSDO 8 V3-PAC are not affected by parasitic voltages in the event of an error.



**NOTE: Damage to module electronics in the event of surge voltage**

Do not use a DC distribution network.

DC distribution network according to IEC 61326-3-1:

A DC distribution network is a DC power supply network, which supplies a complete industrial hall with DC voltage and to which any device can be connected. A typical system or machine distribution is not a DC distribution network. For devices that are provided for a typical system or machine distribution, the DC connections are viewed and tested as I/O signals according to IEC 61326-3-1.

### 3.4 Terminal point assignment

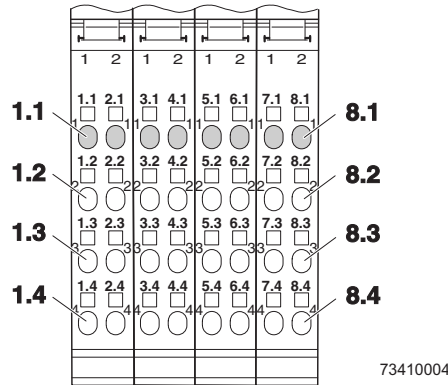


Figure 3-2 Terminal point assignment

The Inline plugs are supplied with the module. They are coded and marked accordingly for connection to prevent polarity reversal. If other plugs are used according to the ordering data, they must also be coded.



Only use the plugs supplied with the module or plugs that are approved as replacement items (see “Ordering data: accessories” on page 10-7).

The following applies for the tables below:

- All outputs are safe digital outputs
- 0 V (GND): common ground for outputs
- FE: common functional earth ground

Table 3-1 Terminal point assignment for plug 1

Terminal point	Signal	Channel assignment	LED
1.1	OUT0_Ch1	Output 0, channel 1	0.1
2.1	OUT0_Ch2	Output 0, channel 2	0.2
1.2	Not used		
2.2	Not used		
1.3	0 V (GND)	Channel 1 and channel 2	
2.3	0 V (GND)	Channel 1 and channel 2	
1.4	FE		
2.4	FE		

Table 3-2 Terminal point assignment for plug 2

Terminal point	Signal	Channel assignment	LED
3.1	OUT1_Ch1	Output 1, channel 1	1.1
4.1	OUT1_Ch2	Output 1, channel 2	1.2
3.2	Not used		
4.2	Not used		
3.3	0 V (GND)	Channel 1 and channel 2	
4.3	0 V (GND)	Channel 1 and channel 2	
3.4	FE		
4.4	FE		

Table 3-3 Terminal point assignment for plug 3

Terminal point	Signal	Channel assignment	LED
5.1	OUT2_Ch1	Output 2, channel 1	2.1
6.1	OUT2_Ch2	Output 2, channel 2	2.2
5.2	Not used		
6.2	Not used		
5.3	0 V (GND)	Channel 1 and channel 2	
6.3	0 V (GND)	Channel 1 and channel 2	
5.4	FE		
6.4	FE		

Table 3-4 Terminal point assignment for plug 4

Terminal point	Signal	Channel assignment	LED
7.1	OUT3_Ch1	Output 3, channel 1	3.1
8.1	OUT3_Ch2	Output 3, channel 2	3.2
7.2	Not used		
8.2	Not used		
7.3	0 V (GND)	Channel 1 and channel 2	
8.3	0 V (GND)	Channel 1 and channel 2	
7.4	FE		
8.4	FE		



**WARNING: Loss of functional safety due to parasitic voltages**

Connect the ground of the actuator to the ground terminal point of the corresponding output on the Inline plug. An external ground may not be used.

## 4 Assembly, removal, and electrical installation

### 4.1 Assembly and removal

#### 4.1.1 Unpacking the module

The module is supplied in an ESD box together with a package slip with installation instructions. Please read the complete package slip carefully.

The module may only be installed and removed by qualified personnel.

**NOTE: Electrostatic discharge**

The safety module contains components that can be damaged or destroyed by electrostatic discharge. When handling the safety module, observe the necessary safety precautions against electrostatic discharge (ESD) according to EN 61340-5-1 and EN 61340-5-2.

#### 4.1.2 General

**WARNING: Unintentional machine startup**

Do not assemble or remove the module while the power is connected.

Before assembling or removing the module, disconnect the power to the module and the entire Inline station and ensure that it cannot be switched on again.

Make sure the entire system is reassembled before switching the power back on.

Observe the diagnostic indicators and any diagnostic messages.

The system may only be started provided neither the station nor the system poses a hazard.

The IB IL 24 LPSDO 8 V3-PAC safety terminal is designed for use within an Inline station. Only use the safety terminal in the 24 V DC area of an Inline station.

To ensure reliable operation, install the safety terminal in housing protected from dust and humidity (IP54 or higher). In order to prevent manipulation, secure the housing (control cabinet/control box) against being opened by unauthorized persons.

Mount all Inline terminals on 35 mm DIN rails.

Only connect the cables using the supplied Inline plugs or Inline plugs listed in the ordering data.

### 4.1.3 Setting the DIP switches



Set the DIP switches accordingly for your application **before** assembling the module in an Inline station. The switches cannot be accessed when the safety terminal is installed in the Inline station.

The module has a 2-pos. and a 10-pos. DIP switch.

The DIP switches are located on the left-hand side of the safety module.

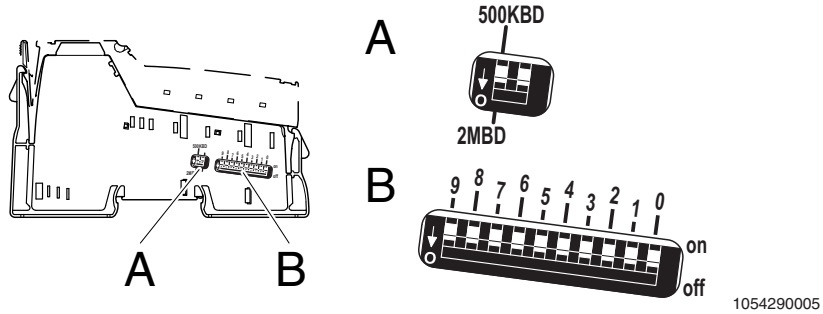


Figure 4-1 DIP switches

- A Switch for setting the transmission speed
- B Switch for setting the address (island number)

**2-pos. DIP switch:**

The transmission speed is set via the 2-pos. DIP switch.

**Left switch:  
transmission speed**

Set the transmission speed:

- 500 kbaud or
- 2 Mbaud

The transmission speed is preset to 2 Mbaud.



Only use devices with a uniform transmission speed within an Inline station (a local bus). It is not possible to operate a mixture of devices with different transmission speeds.



**10-pos. DIP switch:  
address**

The island number is set via the 10-pos. DIP switch.



**NOTE: Malfunction in the event of incorrect addressing**  
**Make sure that in an overall system consisting of the SafetyBridge system and a PROFIsafe system, the addresses are unique. Duplicate address assignment is not permitted.**



For additional information on addressing, please refer to "SafetyBridge address assignment" on page A-12.



**NOTE: Malfunction during mixed operation**  
 During simultaneous use of SafetyBridge V2 and SafetyBridge V3 on a controller, make sure that the island number of the SafetyBridge V3 system is  $\geq 8$ .  
 This should be checked during overall validation of the system.

Use switches 9 to 5 to set the island number.  
 An "island" always consists of the IB IL 24 LPSDO 8 V3-PAC and the satellites assigned to it.

**Overview of the switch  
positions**

Table 4-1 Switch position for SafetyBridge V3

SafetyBridge V3									
Address switch									
Island number					Reserved				
9	8	7	6	5	4	3	2	1	0
					OFF	OFF	OFF	OFF	OFF
$1_{dec}$ to $31_{dec}$					$0_{dec}$				

### 4.1.4 Assembly and removal of the safety module



For general information on assembling and removing Inline terminals, please refer to the IL SYS INST UM E user manual.

#### Assembly



- Set the DIP switches prior to assembly (see Section “Setting the DIP switches” on page 4-2). The DIP switches cannot be accessed when the safety module is installed in the Inline station.
- Observe a mounting distance of 30 mm above and 40 mm below the safety module. Shorter distances may inhibit proper handling during installation.

#### - Snap on base

- Disconnect the power to the station.
- Before snapping on the safety module, remove the inserted plugs from the safety terminal and the adjacent plugs from the neighboring Inline terminal on the left. This prevents the potential routing knife contacts and the keyway/featherkey connections from being damaged.
- Hold the safety module perpendicular and snap it onto the DIN rail (7.5 mm in height).



Ensure that **all** featherkeys and keyways on adjacent terminals are **securely** interlocked.

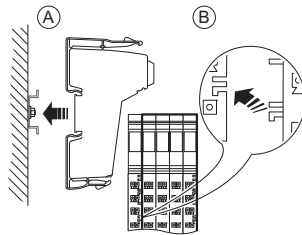


Figure 4-2 Snapping on the safety module base

- Check that all the snap-on mechanisms are securely snapped into place.
- Insert the plugs in the specified order (A, B).

#### - Insert plugs



Only use the plugs supplied with the module or plugs that are approved as replacement items (see “Ordering data: accessories” on page 10-7).

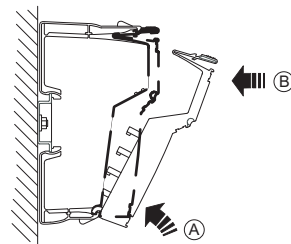


Figure 4-3 Inserting the plug

**Removal**

- Disconnect the power to the station.
- Before snapping on the safety module, remove the plugs from the safety module and the adjacent plug from the neighboring Inline terminal on the left.

**– Remove plugs**

- Remove the plug by pressing the back shaft latching (A) and levering off the plug (B).

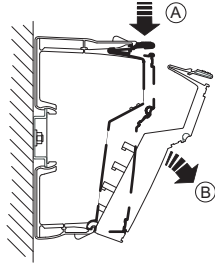


Figure 4-4 Removing the plug

**– Remove base**

- Release the base by pressing on the front and back snap-on mechanisms (A) and pull it out perpendicular to the DIN rail (B).

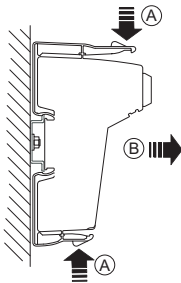


Figure 4-5 Removing the safety module base

## 4.2 Electrical installation



### **WARNING: Electric shock/unintentional machine startup**

Prior to electrical installation, disconnect the power to the system and make sure that it cannot be switched on again unintentionally.

Make sure installation has been completed before switching the power back on.

The system may only be started provided the system does not pose a hazard.

### 4.2.1 Electrical installation of the Inline station

Electrical installation of the Inline station includes the following:

- Connecting the bus system to the Inline station
- Connecting the supply voltages for the Inline station

Carry out electrical installation for the Inline station according to the IL SYS INST UM E user manual or the Inline system manual for your bus system. Please also observe the specifications in the documentation for the bus coupler used.

### 4.2.2 Electrical installation of the safety module



During installation, always observe the instructions in “Electrical safety” on page 1-3.

Take measures to prevent the incorrect connection, polarity reversal, and manipulation of connections.

The supply voltages are supplied at a bus coupler and/or a power terminal and are supplied to the safety module via the potential jumpers. Therefore, the electrical installation of the safety module only involves connecting the actuators.

The actuators are connected via Inline plugs.

- Wire the plugs according to your application. For the terminal point assignment, please refer to Section “Terminal point assignment” on page 3-4.

For wiring, proceed as follows:

- Strip 8 mm off the cable.



Inline wiring is normally done without ferrules. However, it is possible to use ferrules. If using ferrules, make sure they are properly crimped.

- Push a screwdriver into the actuation shaft of the appropriate terminal point (Figure 4-6, detail 1), so that you can insert the wire into the spring opening. Phoenix Contact recommends using a SZF 1 - 0,6X3,5 screwdriver (Order No. 1204517; see Phoenix Contact “CLIPLINE” catalog).
- Insert the wire (Figure 4-6, detail 2). Remove the screwdriver from the opening. This clamps the wire.

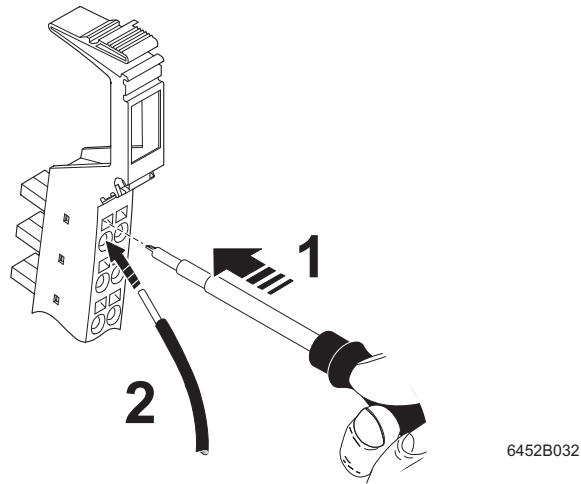


Figure 4-6 Connecting unshielded cables

- Insert the assembled plugs in the corresponding module slot (see Section “Terminal point assignment” on page 3-4).
- Mark all connections to prevent connections to the Inline plugs being mixed up (see IL SYS INST UM E user manual).

## 5 Parameterization of the safety module

### 5.1 Parameterization of the safety module in a SafetyBridge system



For information on the configuration and parameterization of the SafetyBridge system, please refer to Section “Configuration and parameterization using the SAFECNF software tool” on page A-20.

Parameterization includes the following:

- Assignment of island numbers
- Parameterization of outputs

Configuration includes the following:

- Creation of the logic function with SAFECNF

#### Island number

The island number is a unique address of a SafetyBridge island. Set the same island number both in SAFECNF and on the module.



For additional information on the island number, please refer to Section “SafetyBridge address assignment” on page A-12.

Set this address via the DIP switches prior to assembling the safety module (see Section “Setting the DIP switches” on page 4-2).

#### Parameterization and configuration of the module

Parameterization and configuration determine the behavior of the module and therefore have a considerable effect on the safety integrity level that can be achieved.

To parameterize and configure the module, the parameterization and configuration created in the parameterization tool must be written from the controller to the module (e.g., with a functional block).



For information on downloading, please refer to Section “Downloading the configuration and parameter data record” on page A-21.

The supply voltage must be present and the local bus must be in the RUN state when downloading.

The module cannot be operated if it is not parameterized. In this case, the FS LED flashes.

The module is ready to operate if the parameters for all outputs are valid and transmitted without errors. Valid output data is only written in this state. In any other state, every output is set to the safe state.

If errors are detected during parameterization, the parameter data is not transmitted. The FS LED on the module flashes to indicate that the parameterization is invalid. In addition, the error is indicated at the controller. In this case, check and correct the settings.

## 5.2 Parameterization of the safe outputs

The individual outputs of a safety module can be parameterized differently and therefore achieve different safety integrity levels (SIL, SIL CL, Cat., PL).

### Two-channel

If the outputs are operated via two channels, the following fixed assignment applies:

- OUT0\_Ch1 to OUT0\_Ch2
- OUT1\_Ch1 to OUT1\_Ch2
- OUT2\_Ch1 to OUT2\_Ch2
- OUT3\_Ch1 to OUT3\_Ch2

### Single-channel

If two-channel operation in the external wiring of the outputs is not required, the outputs can be parameterized in such a way that they operate independently of one another (single-channel).

### Parameterization

All safe outputs must be parameterized individually. The parameterization options are described in Table 5-1.

Table 5-1 Parameterization of outputs

Parameterization	Value range	Remark
	OUT0 - OUT3	
Assignment	Not used Used	The unused outputs are disabled. However, the monitoring of these outputs remains active.
Output	Single-channel Two-channel	In two-channel operation, the assignment of the outputs to one another is specified and cannot be parameterized.
Switch-off delay for stop category 1	Disabled Enabled	Disabled (default): no switch-off delay. Enabled: the outputs are switched off once the parameterized switch-off delay has elapsed. Please observe the notes below this table.
Switch-off delay for stop category 1	1 to 63	Time conversion according to the parameterization of the "Value range of switch-off delay for stop category 1" parameter. Permissible value range: OUT0 to OUT3: 150 ms to 630 s Accuracy: -5% of the parameterized value - 2 ms/+0 ms Please observe the notes below this table.

Table 5-1 Parameterization of outputs (continued)

Parameterization	Value range	Remark
	OUT0 - OUT3	
Value range of switch-off delay for stop category 1	Value x 10 in ms Value x 100 in ms Value in s Value x 10 in s	Value range/unit for the parameterization of the “Switch-off delay for stop category 1” parameter. Please observe the notes below this table.
Test pulses (output disabled) (in software: test impulses (output switched off))	Disabled Enabled	Enabling and disabling of test pulses. For these test pulses, the output drivers that are disabled are temporarily enabled for test purposes. Please observe the notes below this table.
Enable	Disabled Enabled	Disabled (default value): the corresponding safe output is operated exclusively according to the safety logic. Enabled: enable is active; the safe output data is output after being ANDed with the “Data_LPSDO” process data item (Section A 4). See also “Enable principle” on page A-16.

**Test pulses**



**Note on test pulses**

If the test pulses are disabled, cross circuits and short circuits cannot be detected. Regardless of the parameterization selected under “Test impulses (output switched off)”, the outputs parameterized as “Not used” are tested by test pulses. Please also refer to “Requirements for controlled devices/actuators” on page 2-4 and Section “Connection examples for safe outputs” on page 6-1.

**Switch-off delay for stop category 1**

The **switch-off delay for stop category 1** is calculated from the “Switch-off delay for stop category 1” and “Value range of switch-off delay for stop category 1” parameters.

$$\text{Switch-off delay for stop category 1} = \text{Switch-off delay for stop category 1} \times \text{Value range of switch-off delay for stop category 1}$$



If the switch-off delay for stop category 1 is parameterized with a value less than 150 ms, this value is rejected as a parameterization error (error code 028<sub>hex</sub>).

**Two-channel parameterization**

Please note the following for two-channel parameterization:  
Ensure that the values for the switch-off delay for stop category 1 are the same for both channels. This means that the time must have the same value and the same value range.



### 5.3 Behavior of the outputs in the event of enabled switch-off delay for stop category 1

Depending on the event that causes the outputs to be switched off, and on the parameterization of the switch-off delay, the time until the outputs are actually switched off can vary.

Table 5-2 Switching off of the outputs according to the trigger event and the parameterization

Switch off of outputs	Influence of parameterized switch-off delay	Switch off of outputs
- By the controller	Yes	Once the parameterized switch-off delay has elapsed
- After a bus error	Yes	Once the parameterized switch-off delay has elapsed
- After a short circuit, cross circuit, failure of the supply voltage or hardware fault	No	Immediately (only stop category 0)
- After time monitoring has been exceeded (watchdog time; $F_{WD\_Time}$ ) (e.g., in the event of faulty bus connection)	Yes	Once the parameterized switch-off delay has elapsed



**WARNING: Delayed shutdown when using stop category 1**

**For stop category 1 please take into consideration the following:**

- The guaranteed shutdown time  $t_G$  is extended by the parameterized switch-off delay.



**WARNING: Exception for delayed shutdown:**

- In the event of an error (excluding bus errors) the affected outputs are switched off immediately (without delay). In this case, only stop category 0 is supported.

For the switch-off operation, please take into consideration the following:

- The switch-off operation can be interrupted by switching the output on again.
- The switch-off delay is not guaranteed if a reparameterization or download is initiated.
- Carry out a validation every time the parameterization is modified.

## 6 Connection examples for safe outputs

### 6.1 Explanation of the examples

Depending on the type of wiring, the outputs of a module can achieve different safety integrity levels (SIL, SIL CL, Cat., PL) simultaneously (as long as the settings do not contradict one another).

The following examples only describe the options for the electrical connection of controlled devices/actuators to the safe outputs.

Should you have any questions regarding applications to be implemented, please contact the Phoenix Contact safety hotline (see "Safety hotline" on page 1-7).

The following are specified for each example:

- **Basic specifications**  
The main data for the example is specified in the table.
- **Device diagnostics and behavior of the module in the event of an error**  
Diagnostic capability depends on the parameterization.  
If a message is transmitted to the controller in the event of an error, the message is specified in the tables. For information on the relevant error code, possible solutions, and information as to whether acknowledgment is required, please refer to Section "Errors: messages and removal" on page 8-1.
- **Typical parameterization**  
The table illustrates an example of all the parameters for the specified assignment.

Key for all tables in this section:

Table 6-1 "Device diagnostics and behavior of the module in the event of an error" tables

Representation	Meaning
SF	Safety function
OUTx	OUT1 or OUT2 LED; diagnostic message for each output

Table 6-2 Parameterization tables

Representation	Meaning
<b>Bold</b>	Mandatory setting
Normal	Typical setting, another setting is possible depending on the application
–	Not evaluated

Errors (cross circuits, short circuits), which can be prevented by correct installation (e.g., protected cable installation, isolated cable installation, double insulation, use of ferrules) are not described in the following tables.

Therefore, for example, only errors between outputs, which are on the same plug, are described. For example, in the event of correct installation, cross circuits with outputs of other plugs cannot occur.



For all examples, please also observe the measures specified in the individual tables, which must be taken to achieve the specified SIL/SIL CL/Cat./PL and all measures according to standards IEC 61508-2, EN 62061, EN 954-1, and EN ISO 13849-1 to achieve the specified SIL/SIL CL/Cat./PL.



**WARNING: Disregarding this warning may lead to the loss of the safety function**

An external voltage may not be supplied in an output (e.g., via cross circuits). These errors can adversely affect the operation of the module (or even destroy the module) and therefore result in the loss of the safety function. Therefore, these errors must be prevented. Install the connecting cables for connecting the actuators so that they are protected against cross circuits.

Please observe the load capacity of the outputs according to the technical data in “Safe digital outputs” on page 2-3.

## 6.2 Notes on the protective circuit for external relays/contactors (freewheeling circuit)

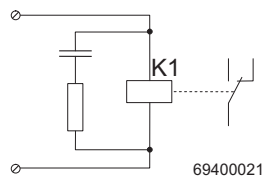


Figure 6-1 Example of the freewheeling circuit for an external relay



- Limit the voltage induced on circuit interruption to < -15 V (e.g., with RC elements, suppressor diodes or varistors).
- Please note that the freewheeling circuit affects the dropout time and the service life of the contactor.
- Please observe the specifications of the relay manufacturer when sizing the relay protective circuit.

### 6.3 Measures required to achieve a specific safety integrity level

The safety integrity level (SIL, SIL CL, performance level, and category) that can be achieved is specified for each connection example.



Please also refer to Section “Achievable safety depending on the modules used” on page A-25.

#### SIL/SIL CL



Use the relevant standard to determine the probability of failure in your application according to IEC 61508-2 (SIL) and EN 62061 (SIL CL).

When the SIL/SIL CL is specified, the module takes up 1% of the specified SIL/SIL CL.

Table 6-3 PFD and PFH depending on the SIL/SIL CL

	PFD	PFH
SIL 2/SIL CL 2	1% of $10^{-2}$	1% of $10^{-6}$
SIL 3/SIL CL 3	1% of $10^{-3}$	1% of $10^{-7}$

#### Performance level



Use standard EN ISO 13849-1 to determine the performance level in your application.

#### Category

In order to actually achieve the specified category, the required measures listed below must be implemented.

##### Cat. 2

- Use proven and basic safety principles according to EN ISO 13849-2.
- Use appropriately qualified actuators (see Section “Requirements for controlled devices/actuators” on page 2-4).
- Please note that mechanical failure of the switching device can result in the loss of the safety function.
- Prevent the welding of contacts on the connected contactors or safety relays with appropriate protection against overcurrent and surge voltage.
- Please note that **a single** error can result in the loss of the safety function between tests.
- Ensure that the external wiring is tested by the machine control system on machine startup and at suitable intervals. This test must detect the loss of the safety function.
- In the event of an error, either safe disconnection must be implemented or a warning (optical and/or audible) must be generated depending on the application.

**Cat. 3**

- Use proven and basic safety principles according to EN ISO 13849-2.
- Use appropriately qualified actuators (see Section "Requirements for controlled devices/actuators" on page 2-4).
- Please note that mechanical failure of the switching device can result in the loss of the safety function.
- Prevent the welding of contacts on the connected contactors or safety relays with appropriate protection against overcurrent and surge voltage.
- All errors that cannot be detected can result in the loss of the safety function. Take appropriate measures to prevent such errors. Suitable measures include, for example, protected cable installation or double insulation. Please note the information in the following tables.
- Please take into consideration errors with a common cause.
- Ensure that **a single** error does not result in the loss of the safety function.

**Cat. 4**

- Use proven and basic safety principles according to EN ISO 13849-2.
- Use appropriately qualified actuators (see Section "Requirements for controlled devices/actuators" on page 2-4).
- Please note that mechanical failure of the switching device can result in the loss of the safety function.
- Prevent the welding of contacts on the connected contactors or safety relays with appropriate protection against overcurrent and surge voltage.
- An accumulation of errors must not result in the loss of the safety function. Following the third error, evaluation can be aborted if the probability of further errors occurring is low.
- All errors that cannot be detected can result in the loss of the safety function. Take appropriate measures to prevent such errors. Suitable measures include, for example, protected cable installation or double insulation. Please note the information in the following tables.
- Please take into consideration errors with a common cause.

## 6.4 Single-channel assignment of safe outputs

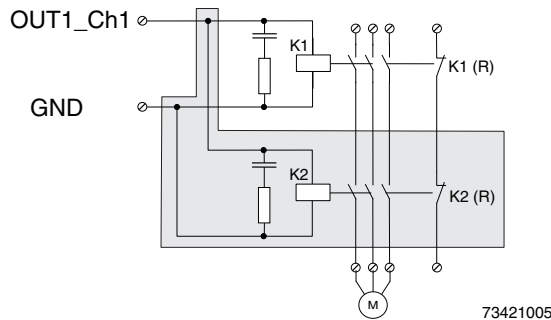


Figure 6-2 Single-channel assignment of outputs



- In order to achieve Cat. 3 or PL d with single-channel assignment of the outputs, a two-channel actuator must be used. The two-channel operation of the actuator with the corresponding connection is represented on a gray background.
- The failure detection time is 20 ms. This means that high pulses of this width can occur in the event of an error. If the application responds to these pulses, use the two-channel assignment of the outputs.

K1 (R) and K2 (R) represent the forcibly guided N/C contacts for monitoring the state of the relay (readback contacts). Connect these contacts via safe digital inputs. Evaluate the readback and therefore the state of the switching elements in the safety logic.



**WARNING: Loss of safety function**

Connect the actuator ground directly to terminal point GND of the safety module. An external ground may not be used.

**Basic specifications**

Actuator	Single-channel	Two-channel
Achievable SIL/SIL CL/Cat./PL	SIL 2/SIL CL 2/Cat. 2/PL c	SIL 2/SIL CL 2/Cat. 3/PL d



**WARNING: Loss of electrical and functional safety**

- To achieve the specified safety integrity level, please refer to Section “Measures required to achieve a specific safety integrity level” on page 6-3.
- Please note that in order to achieve the specified PL, the actuator must have a medium level of diagnostic coverage (90% to 99%) and medium MTTFd. A high level of diagnostic coverage (> 99%) is recommended for the application according to PL d.
- To achieve Cat. 3 and PL d, the test pulses must be enabled.
- Use actuators that can achieve the required safety integrity level.
- Evaluate the readback contacts to achieve the corresponding safety integrity level.



Enable the test pulses to improve device diagnostics.  
 If the test pulses for the actuator are faulty, they can be disabled. In this case, test the switching capability of the outputs at regular intervals.

**Device diagnostics and behavior of the module in the event of an error**

Table 6-4 Single-channel: test pulses enabled

Error type	Detection	Diagnostics	Loss of SF	Remark
<b>Error in the actuator</b>				
Despite being disabled, the actuator does not switch to the safe state (e.g., a contact will not open)	No	None	Yes	Detect errors using external monitoring. Please take into consideration all the possible errors for the actuator used. <b>Test the shutdown capability of the actuator at regular intervals.</b> <b>If necessary, use a two-channel actuator.</b>
Actuator cannot be enabled (e.g., interrupt)	No	None	No	Detect errors using external monitoring. Please take into consideration all the possible errors for the actuator used. <b>Ensure that this error does not result in delayed system startup.</b>
Other errors (depending on the actuator)				<b>Please take into consideration all possible errors that can occur in the actuator.</b>
<b>Error in the wiring</b>				
<b>Interrupt</b>				
Cable interrupt between output and actuator or between actuator and ground	No	None	No	Detect errors using external monitoring. Please take into consideration all the possible errors for the actuator used. <b>Ensure that this error does not result in delayed system startup.</b>
<b>Cross circuit</b>				
Output to output	Yes	All LEDs OUT: Red ON	Yes	When the outputs are disabled, a cross circuit between the outputs is only detected if the test pulses are enabled. If an error is detected, the module disables all its outputs.
<b>Short circuit</b>				
Output to ground or output to FE	Yes	Short circuit or overload, OUTx	No	The error is detected in the ON state. The output is disabled (safe state). The module cannot be switched on again with an edge from "0" to "1" until the error has been removed and acknowledged.  <div style="border: 1px solid black; padding: 5px; display: inline-block;"> <p><b>WARNING: Unexpected machine startup</b>                      An operator acknowledgment leads to a positive edge and can therefore result in the outputs being re-enabled.</p> </div>

Typical parameterization

Parameterization	Parameterized as	Remark
Assignment	<b>Used</b>	
Output	<b>Single-channel</b>	
Switch-off delay for stop category 1	Enabled	Or disabled
Switch-off delay for stop category 1	30	Application-specific
Value range of switch-off delay for stop category 1	Value in s	Application-specific
Test pulses (output disabled) (in software: test impulses (output switched off))	Enabled	Or disabled

According to the “Value range of switch-off delay for stop category 1” and “Switch-off delay for stop category 1” parameters, in this example, the switch-off delay is  $30 \times 1 \text{ s} = 30 \text{ s}$ .



## 6.5 Two-channel assignment of safe outputs

For two-channel assignment of the safe outputs, two adjacent outputs are always used. This assignment is fixed and cannot be parameterized (see Section “Two-channel” on page 5-2).

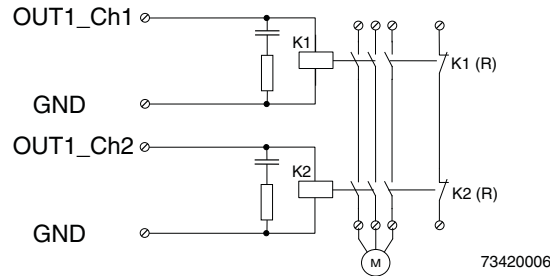


Figure 6-3 Two-channel assignment of outputs

K1 (R) and K2 (R) represent the forcibly guided N/C contacts for monitoring the state of the relay (readback contacts). Connect these contacts via safe digital inputs. Evaluate the readback and therefore the state of the switching elements in your safety logic.



**WARNING: Loss of safety function**

- Connect the actuator ground directly to terminal point GND of the safety module. An external ground may not be used.
- The failure detection time is 20 ms. This means that high pulses of this width can occur at the faulty output (channel) in the event of an error. The two-channel assignment means that this does not result in a hazardous state.

**Basic specifications**

<b>Actuator</b>	Two-channel
<b>Achievable SIL/SIL CL/Cat./PL</b>	SIL 3/SIL CL 3/Cat. 4/PL e



**WARNING: Loss of electrical and functional safety**


- To achieve the specified safety integrity level, please refer to Section “Measures required to achieve a specific safety integrity level” on page 6-3.
- Please note that in order to achieve the specified PL, the actuator must have a medium level of diagnostic coverage (90% to 99%) and medium MTTFd. A high level of diagnostic coverage (> 99%) is recommended for the application according to PL d.
- Use actuators that can achieve the required safety integrity level.
- Evaluate the readback contacts to achieve Cat. 3 or Cat. 4.
- If the test pulses are disabled:  
Test the outputs and external wiring by enabling the outputs at regular intervals. The time between two tests must not exceed eight hours.



Enable the test pulses to improve device diagnostics.  
If the test pulses for the actuator are faulty, they can be disabled. In this case, test the switching capability of the outputs at regular intervals.

Device diagnostics and behavior of the module in the event of an error

Table 6-5 Two-channel

Error type	Detection	Diagnostics	Loss of SF	Remark
<b>Error in the actuator</b>				
Despite being disabled, a switching element of the two-channel actuator does not switch to the safe state (e.g., a contact will not open)	No	None	No	No loss of the safety function as the second switching element of the two-channel actuator can be disabled. Detect errors using external monitoring. <b>Implement a restart inhibit in the event of this error.</b> Please take into consideration all the possible errors for the actuator used. <b>Test the shutdown capability of the actuator at regular intervals.</b>
Actuator cannot be enabled (e.g., interrupt)	No	None	No	Detect errors using external monitoring. Please take into consideration all the possible errors for the actuator used. <b>Ensure that this error does not result in delayed system startup.</b>
Other errors (depending on the actuator)				<b>Please take into consideration all possible errors that can occur in the actuator.</b>
<b>Error in the wiring</b>				
<b>Interrupt</b>				
Cable interrupt between output and actuator or between actuator and ground	No	None	No	Detect errors using external monitoring. Please take into consideration all the possible errors for the actuator used. <b>Ensure that this error does not result in delayed system startup.</b>
<b>Cross circuit</b>				
Output to output	Yes (conditional)	All LEDs OUT: Red ON	No	When the outputs are disabled, a cross circuit between the outputs is only detected if the test pulses are enabled. If an error is detected, the module disables all its outputs. <b>If the test pulses have been disabled, test the circuit and the external wiring at regular intervals by enabling the outputs.</b>
<b>Short circuit</b>				
Output to ground or output to FE	Yes	Short circuit or overload, OUTx	No	The error is detected in the ON state. The output is disabled (safe state). The module cannot be switched on again with an edge from "0" to "1" until the error has been removed and acknowledged.  <div style="border: 1px solid black; padding: 5px; display: inline-block;">  <p><b>WARNING: Unexpected machine startup</b> An operator acknowledgment leads to a positive edge and can therefore result in the outputs being re-enabled.</p> </div>

Typical parameterization

Parameterization	Parameterized as		Remark
	Channel 1	Channel 2	
Assignment	<b>Used</b>	<b>Used</b>	
Output	<b>Two-channel</b>	<b>Two-channel</b>	
Switch-off delay for stop category 1	Enabled	Enabled	Or disabled
Switch-off delay for stop category 1	30	30	Application-specific
Value range of switch-off delay for stop category 1	Value in s	Value in s	Application-specific
Test pulses (output disabled) (in software: test impulses (output switched off))	<b>Enabled</b>	<b>Enabled</b>	

According to the “Value range of switch-off delay for stop category 1” and “Switch-off delay for stop category 1” parameters, in this example, the switch-off delay is  $30 \times 1 \text{ s} = 30 \text{ s}$ .

## 7 Startup and validation

### 7.1 Initial startup

Table 7-1 Steps for parameterization and configuration (via SAFECONF Version 2.8 or later)

Step	Relevant section and literature
Carry out the necessary parameterization.	Section "Parameterization of the safety module" on page 5-1
Carry out the necessary parameterization for the island satellites.	User manuals for the modules used
Configure the safety function.	Online help in SAFECONF

To start up, proceed as described in Table 7-2.

Table 7-2 Steps for startup

Step	Relevant section and literature
Set the transmission speed.	Section "Setting the DIP switches" on page 4-2
Set the address (island number).	Section "Setting the DIP switches" on page 4-2
Install the safety module within the Inline station.	Section "Assembly, removal, and electrical installation" on page 4-1
Connect the bus system and supply voltage cables to the Inline station.	IL SYS INST UM E user manual or documentation for the bus coupler
Wire the outputs according to your application.	Section "Assembly, removal, and electrical installation" on page 4-1 Section "Inline potential and data routing, and Inline plugs" on page 3-1 User manuals for the functional blocks used
Before applying the operating voltage: <ul style="list-style-type: none"> <li>– Ensure that there are no wiring errors (e.g., cross circuit or short circuit) or grounding errors by testing with a multimeter.</li> <li>– Check whether the ground connection is safe.</li> </ul>	
Connect the required voltages to the Inline station.	IL SYS INST UM E user manual or documentation for the bus coupler, the Inline controller or the power terminal

Table 7-2 Steps for startup (continued)

Step	Relevant section and literature
<p>Once the operating voltage has been applied:</p> <ul style="list-style-type: none"> <li>– If possible, measure the wave form of the voltages to ensure that there are no deviations.</li> <li>– Measure the output voltages on the module, as well as the supply voltages, which supply connected loads (e.g., motor) to ensure that they are in the permissible range.</li> <li>– Use the LEDs on the devices to check that the module starts up without any errors (there must be no red LEDs permanently on; the FS LED flashes because the device is not parameterized).</li> </ul>	
<p>Check the assembly and installation.</p>	<p>Checklist “Assembly, removal, and electrical installation” on page 4-1</p>
<p>Implement data flow between the standard control system and the safety modules and between the safety modules themselves.</p>	<p>Section “SafetyBridge V3 system handling in various control systems” on page A-16</p>
<p>Download the parameterization and configuration data from the standard control system to the safety modules.</p>	<p>Section “Downloading the configuration and parameter data record” on page A-21</p>
<p>Perform a function test and validation. Check whether the safety function responds as planned during configuration and parameterization.</p>	<p>Checklist “Validation” on page B-11</p>

When connecting the supply voltages, use the diagnostic and status indicators to check whether the module has started up correctly or whether any errors are indicated. For instructions on how to proceed in the event of an error, please refer to Section “Errors: messages and removal” on page 8-1.

## 7.2 Restart after replacing a safety module

### 7.2.1 Replacing a safety module

**WARNING: Unintentional machine startup**

Do not assemble or remove the module while the power is connected.

Before assembling or removing the module, disconnect the power to the module and the entire Inline station and ensure that it cannot be switched on again.

Make sure the entire system is reassembled before switching the power back on.

Observe the diagnostic indicators and any diagnostic messages.

The system may only be started provided neither the station nor the system poses a hazard.

If replacing a module, proceed as described for assembly and removal (see Section “Assembly, removal, and electrical installation” on page 4-1).

Ensure that the new safety module is mounted at the correct position in the local bus. The new module must meet the following requirements:

- Same device type
- Same or later version

**NOTE: Versions that are not compatible for replacement**

The IB IL LPSDO 8 V3-PAC device type is not the same as the IB IL LPSDO 8 V2-PAC and is therefore not compatible for replacement.

Carry out a validation and perform a function test after replacing the module.

### 7.2.2 Restart

Once the safety module has been replaced, proceed as described for initial startup (see Section “Initial startup” on page 7-1).

Plug the Inline plugs into the correct connections.

Carry out a validation and perform a function test after replacing the module.

## 7.3 Validation

Carry out a safety validation every time you make a safety-related modification to the SafetyBridge system.

When validating your EUC, check the assignment of the individual actuator connections.

Determine whether:

- The correct safe actuators are connected to the safety module
- The safety module has been parameterized correctly
- The signals used in your safety logic have been linked to the safe actuators correctly

Perform a function test and error simulation.

Please observe the checklist “Validation” on page B-11 during validation.

## 8 Errors: messages and removal

Depending on the error type, errors that are diagnosed are displayed via the local diagnostic indicators and/or transmitted to the controller as diagnostic messages.

The tables below provide an overview of the diagnosed errors, their causes, effects, and possible measures for error removal.

In this manual, diagnostic codes are sorted in ascending order by error type. The following errors are possible:

Table 8-1 Overview of diagnostic codes

Diagnostic code (hex)	Error type	See
X010 ... X0AA	Safe digital output errors	Section 8.1 on page 8-2
X1F0	Supply voltage errors	Section 8.2 on page 8-3
X1F2	General errors	Section 8.5 on page 8-6
X230 ... X2F2	Parameterization errors	Section 8.4 on page 8-4
X3FC ... X7C4	Connection errors to satellites	Section 8.5 on page 8-6

As the first digit is never relevant, the code always starts with an X.

For every error that occurs, the cause of the error must first be removed. If necessary, the error is then acknowledged. Errors that must be acknowledged are indicated in the "Acknowledgment" column in the tables below.



If diagnostic codes are indicated by the system, which do not appear in the tables below, please contact Phoenix Contact.

### Error removal

To remove the cause of an error, please proceed as described in the "Solution" column in the tables below.

### Error acknowledgment

Instructions on how to acknowledge an error can be found in Section "Acknowledging an error" on page 8-7.



**WARNING: Unexpected machine startup**

An operator acknowledgment leads to a positive edge and can therefore result in the outputs being re-enabled.

### LED

The "LED" column specifies which local diagnostic LEDs indicate the error.

### Acknowledgment

To remove the error, evaluate the PUR and OAR bits in the diagnostic register of the IB IL 24 LPSDO 8 V3-PAC (see Section A 4). These specify whether a power up is expected or whether an acknowledgment is required.

Errors that must be acknowledged are indicated with "Yes" in the "Acknowledgment" column. Special conditions for re-enabling an output or the module are specified in brackets [e.g., Yes (1)] in the "Acknowledgment" column and explained below the relevant table.



For information on acknowledging satellite errors, see Section "Acknowledgment of error messages for satellites" on page A-19.

## 8.1 Safe digital output errors

Table 8-2 Safe output errors

Error cause	Diagnostic code (hex)	LED	Remark	Effect	Solution	Acknowledgment
<b>Hardware fault</b> X010: OUT0_Ch1 X011: OUT1_Ch1 X012: OUT2_Ch1 X013: OUT3_Ch1	<b>X01n</b> X017: OUT0_Ch2 X018: OUT1_Ch2 X019: OUT2_Ch2 X01A: OUT3_Ch2	All OUT: red ON	The indicated output cannot be disabled	All other module outputs are in the safe state	Power up with error-free selftest Replacement	Yes (1)
<b>Short circuit or overload</b> X030: OUT0_Ch1 X031: OUT1_Ch1 X032: OUT2_Ch1 X033: OUT3_Ch1	<b>X03n</b> X037: OUT0_Ch2 X038: OUT1_Ch2 X039: OUT2_Ch2 X03A: OUT3_Ch2	OUTy: red ON		Affected output is in the safe state	Check actuator Check plug and cabling Check freewheeling circuit at the contactor	Yes (2)
<b>Error at the output or short circuit during the test</b> X050: OUT0_Ch1 X051: OUT1_Ch1 X052: OUT2_Ch1 X053: OUT3_Ch1	<b>X05n</b> X057: OUT0_Ch2 X058: OUT1_Ch2 X059: OUT2_Ch2 X05A: OUT3_Ch2	All OUT: red ON	Pulse test (brief activation) at the output failed	All module outputs are in the safe state	Power up with error-free selftest Replacement	Yes (1)
<b>Error at the output during the test</b> X060: OUT0_Ch1 X061: OUT1_Ch1 X062: OUT2_Ch1 X063: OUT3_Ch1	<b>X06n</b> X067: OUT0_Ch2 X068: OUT1_Ch2 X069: OUT2_Ch2 X06A: OUT3_Ch2	All OUT: red ON	Pulse test (brief deactivation) at the output failed	All module outputs are in the safe state	Power up with error-free selftest Replacement	Yes (1)
<b>Hardware fault</b>	<b>X091</b>	All OUT: red ON	Detected by internal tests.	All module outputs are in the safe state	Power up with error-free selftest Replacement	Yes (1)
<b>Cross circuit at the indicated output</b> X0A0: OUT0_Ch1 X0A1: OUT1_Ch1 X0A2: OUT2_Ch1 X0A3: OUT3_Ch1	<b>X0An</b> X0A7: OUT0_Ch2 X0A8: OUT1_Ch2 X0A9: OUT2_Ch2 X0AA: OUT3_Ch2	All OUT: red ON	Cross circuit with another output or with an external signal	All module outputs are in the safe state	Remove error Power up with error-free selftest	Yes (1)

Acknowledge all errors that are present. Only then can the outputs be re-enabled.

**Acknowledgment: yes (1)** Acknowledging the diagnostic message deletes the message. The module can only be restarted or reparameterized following power up or soft reset and error-free selftest.



**Acknowledgment: yes (2)** Acknowledging the diagnostic message deletes the message and enables a restart. Following successful acknowledgment, the module also expects a positive edge from the application for the output.



**WARNING: Unexpected machine startup**

An operator acknowledgment leads to a positive edge and can therefore result in the outputs being re-enabled.

## 8.2 Supply voltage errors

Table 8-3 Supply voltage  $U_M$  errors

Error cause	Diagnostic code (hex)	LED	Remark	Effect	Solution	Acknowledgment
Undervoltage $U_M$	X1F0	UM flashing	$U_M$ below the permissible voltage range	All module outputs are in the safe state	Check supply voltage level and correct  Check supply line length and load	Yes (3)

**Acknowledgment: yes (3)** Acknowledging the diagnostic message deletes the message and activates the outputs.

**Undervoltage at  $U_M$ :** Supply voltage  $U_M$  is measured. If  $U_M < 17\text{ V}$ , a diagnostic message is generated.

## 8.3 General errors

Table 8-4 General errors

Error cause	Diagnostic code (hex)	LED	Remark	Effect	Solution	Acknowledgment
Device temperature at critical value	X1F2			Immediate shutdown. Further temperature increase causes the module to switch to the safe state.	Check and adapt: <ul style="list-style-type: none"> <li>– Ambient conditions</li> <li>– Derating</li> <li>– Output loads</li> <li>– Switching frequency</li> </ul>	Yes (4)
Hardware fault		FS ON	Error in the logic area	Module is in the safe state	Replacement	
			Impermissible DIP switch position	Module is in the safe state	Check and correct switch position	

**Acknowledgment: yes (4)** Acknowledging the diagnostic message deletes the message.

## 8.4 Parameterization errors

Table 8-5 Parameterization errors

Error cause	Diagnostic code (hex)	LED	Remark	Effect	Solution	Acknowledgment
<b>Incorrect parameterization</b>	See Table 8-6	FS (flashing)	Each output is parameterized individually	Module is in the safe state	Check and correct parameterization.	–

In order to determine what type of parameterization error has occurred, use the corresponding software to access the controller online and read the error.

Proceed as follows, e.g., in the SafetyBridge system:

- The diagnostic LEDs indicate that an error has occurred.
- Access the higher-level standard control system online.  
For each module of the SafetyBridge island, a diagnostic register is mapped to the process image of the IB IL 24 LPSDO 8 V3-PAC.  
From this, determine the module of the safety island in which an error has occurred.
- Evaluate the specified diagnostic code.

Table 8-6 Parameterization errors

Diagnostic code		Short description	Solution
(hex)	(dec)		
<b>X21n</b> X210: OUT0_Ch1&2 X211: OUT1_Ch1&2 X212: OUT2_Ch1&2 X213: OUT3_Ch1&2	<b>528:</b> OUT0_Ch1&2 <b>529:</b> OUT1_Ch1&2 <b>530:</b> OUT2_Ch1&2 <b>531:</b> OUT3_Ch1&2	The parameterized shutdown time for the indicated output is outside the permissible value range.	Correct value and resend parameter data to the module.
<b>X22n</b> X220: OUT0_Ch1 X221: OUT1_Ch1 X222: OUT2_Ch1 X223: OUT3_Ch1	<b>544:</b> OUT0_Ch1&2 <b>545:</b> OUT1_Ch1&2 <b>546:</b> OUT2_Ch1&2 <b>547:</b> OUT3_Ch1&2	Outputs parameterized for two-channel operation must be assigned the same shutdown times.	Correct value and resend parameter data to the module.
<b>X23n</b> X230: OUT0_Ch1&2 X231: OUT1_Ch1&2 X232: OUT2_Ch1&2 X233: OUT3_Ch1&2	<b>560:</b> OUT0_Ch1&2 <b>561:</b> OUT1_Ch1&2 <b>562:</b> OUT2_Ch1&2 <b>563:</b> OUT3_Ch1&2	The parameterization of two related outputs does not correspond to the two-channel setting.	Correct value and resend parameter data to the module.
<b>X28n</b> X280: OUT0_Ch1 X281: OUT1_Ch1 X282: OUT2_Ch1 X283: OUT3_Ch1 X287: OUT0_Ch2 X288: OUT1_Ch2 X289: OUT2_Ch2 X28A: OUT3_Ch2	<b>640:</b> OUT0_Ch1 <b>641:</b> OUT1_Ch1 <b>642:</b> OUT2_Ch1 <b>643:</b> OUT3_Ch1; <b>647:</b> OUT0_Ch2 <b>648:</b> OUT1_Ch2 <b>649:</b> OUT2_Ch2 <b>650:</b> OUT3_Ch2	The parameterized switch-off delay time for the output is outside the permissible value range.	Correct value and resend parameter data to the module.

Table 8-6 Parameterization errors (continued)

Diagnostic code		Short description	Solution
(hex)	(dec)		
<b>X29n</b> X290: OUT0_Ch1&2 X291: OUT1_Ch1&2 X292: OUT2_Ch1&2 X293: OUT3_Ch1&2	<b>656:</b> OUT0_Ch1&2 <b>657:</b> OUT1_Ch1&2 <b>658:</b> OUT2_Ch1&2 <b>659:</b> OUT3_Ch1&2	For outputs parameterized for two-channel operation, the same settings were not assigned for the switch-off delay.	Correct setting and resend parameter data to the module.
<b>X2Bn</b> X2B0: OUT0_Ch1&2 X2B1: OUT1_Ch1&2 X2B2: OUT2_Ch1&2 X2B3: OUT3_Ch1&2	<b>688:</b> OUT0_Ch1&2 <b>689:</b> OUT0_Ch1&2 <b>690:</b> OUT0_Ch1&2 <b>691:</b> OUT3_Ch1&2	For outputs parameterized for two-channel operation, the same settings were not assigned for the enable function.	Correct setting and resend parameter data to the module.
<b>X2F2</b>	<b>754</b>	At least one output with parameterized switch-off delay is still performing a switch-off operation.	Wait until the switch-off operation is complete and resend parameter data to the module.

## 8.5 Connection errors to satellites

Table 8-7 Connection errors to satellites

<b>Error cause</b>	<b>Diagnostic code</b>	<b>Short description</b>	<b>Solution</b>	<b>Acknowledgment</b>
<b>(hex)</b>	<b>(hex)</b>			
<b>Incorrect island number</b>	<b>X3FC</b>	Incorrect island number set at the IB IL 24 LPSDO 8 V3-PAC.	Check switch position and value in software and adapt accordingly.	Reload project.
<b>Communication connection faulty</b>	<b>X500</b>	One or more safe communication connections are faulty.	Check and adapt data state and copy routines.	Acknowledgment required. (The OAR bit is set in the diagnostic register of the IB IL 24 LPSDO 8 V3-PAC)
<b>Incorrect F_Source_Address</b>	<b>X7C2</b>	IB IL 24 LPSDO 8 V3-PAC address set in the software and on the device do not match.	Check switch position and value in software and adapt accordingly.	Power up. (The PUR bit is set in the diagnostic register of the IB IL 24 LPSDO 8 V3-PAC)
<b>Incorrect F_Source_Address</b>	<b>X7C4</b>	The F_Source_Address set on the device is not within the permissible value range.	Check and correct switch position.	
<b>Communication connection faulty</b>	<b>XD00</b>	See X500, the OAR bit is set in the diagnostic register of the IB IL 24 LPSDO 8 V3-PAC		

## 8.6 Acknowledging an error

In the SafetyBridge system, the errors of the IB IL 24 LPSDO 8 V3-PAC as well as those of the corresponding island satellites must be acknowledged via the IB IL 24 LPSDO 8 V3-PAC.

After removing the cause of an error, the diagnostic message must be acknowledged. To do this, set the corresponding bit in the "Dev-Ackn-LPSDO" register (see Section "SafetyBridge V3 system handling in various control systems" on page A-16).



**WARNING: Acknowledgment may result in a hazardous system state**

With the exception of a few special cases, the acknowledgment of an error immediately returns the safe input or output to the operating state. Before acknowledging an error you must, therefore, make sure that the acknowledgment will not cause the machine to switch to a dangerous state.

When planning the machine or system, make sure that acknowledgment is only possible if the danger zone is visible.

If in the event of failure the safety module is replaced, please proceed as described in Section 4, "Assembly, removal, and electrical installation" and Section "Restart after replacing a safety module" on page 7-3.

## 9 Maintenance, repair, decommissioning, and disposal

### 9.1 Maintenance

The device is designed in such a way that maintenance work is not required during the duration of use. However, depending on the application and connected I/O devices it may be necessary to test the function of the I/O devices and the safety chain at regular intervals.

The duration of use of the module is 20 years.

Repeat testing within this time is not required.

Carry out maintenance of connected I/O devices (e.g., light grid) according to the relevant manufacturer specifications.

### 9.2 Repair

Repair work may not be carried out on the safety module. In the event of an error, send the module to Phoenix Contact.

It is strictly prohibited to open the safety module. In order to prevent the manipulation of the module and to detect the unauthorized opening of the module, a security seal is applied to the module. This security seal is damaged in the event of unauthorized opening. In this case, the correct operation of the safety module can no longer be ensured.

### 9.3 Decommissioning and disposal

The machine or system manufacturer specifies the procedure for decommissioning. Decommissioning may only take place according to these specified procedures.

When decommissioning a SafetyBridge system or parts thereof, ensure that the safety modules used:

- Are correctly reused in another system  
In this case, please observe the storage and transport requirements according to the technical data (see "IB IL 24 LPSDO 8 V3-PAC" on page 10-1).
- Or**
- Are disposed of according to the applicable environmental regulations, and in this case can never be reused

# 10 Technical data and ordering data

## 10.1 System data

### 10.1.1 Inline

For system data, please refer to the following user manual:

Inline Automation terminals of the Inline product range  
IL SYS INST UM E

### 10.1.2 SafetyBridge system

SafetyBridge system	
Shutdown time $t_{OUT\_LPSDO}$	15 ms
Maximum number of SafetyBridge islands in the system	31
Maximum number of modules within a SafetyBridge island	1 IB IL 24 LPSDO 8 V3-PAC 16 satellites (IB IL 24 PSDI ... -PAC, IB IL 24 PSDO ...-PAC, freely mixed)
Memory capacity	30 kB for safety logic

## 10.2 IB IL 24 LPSDO 8 V3-PAC

General data	
Housing dimensions (width x height x depth)	48.8 x 119.8 x 71.5 mm
Weight (with plugs)	200 g
Operating mode	
SafetyBridge V3	Process data mode with 24 words
Transmission speed (local bus)	500 kbaud or 2 Mbaud
Ambient temperature	
Operation	-25°C to +55°C
Storage/transport	-25°C to +70°C
Humidity	
Operation	75% on average, 85% occasionally (no condensation)



In the range from -25°C to +55°C appropriate measures against increased humidity must be taken.

Storage/transport

75% on average; 85% occasionally (no condensation)



For a short period, slight condensation may appear on the outside of the housing.

<b>General data (continued)</b>	
Air pressure	
Operation	80 kPa to 108 kPa (up to 2000 m above sea level)
Storage/transport	66 kPa to 108 kPa (up to 3500 m above sea level)
Degree of protection	IP20
Housing material	Plastic PBT, self-extinguishing (V0)
Air and creepage distances	According to IEC 60439-1, derived from IEC 60664-1
Protection class	III (PELV)
Gases that may endanger functions according to DIN 40046-36, DIN 40046-37	
Sulfur dioxide (SO <sub>2</sub> )	Concentration 10 ±0.3 ppm Ambient conditions: – Temperature 25°C ±2 K – Humidity 75% ±5% – Test duration 10 days
Hydrogen sulfide (H <sub>2</sub> S)	Concentration 1 ±0.3 ppm Ambient conditions: – Temperature 25°C ±2 K – Humidity 75% ±5% – Test duration 4 days
Resistance of housing material to termites	Resistant
Resistance of housing material to fungal decay	Resistant
Ambient compatibility	Not resistant to chloroform
Connection data for Inline plugs	
Connection method	Spring-cage terminals
Conductor cross section	0.2 mm <sup>2</sup> to 1.5 mm <sup>2</sup> (solid or stranded), 24 - 16 AWG
Supported stop category according to EN 60204	0 1 in error-free state
<b>Mechanical requirements</b>	
Vibration according to IEC 60068-2-6	Operation: 2g, Criterion A
Shock according to IEC 60068-2-27	15g over 11 ms, Criterion A
<b>Safety characteristics according to IEC 61508-2/EN 61508</b>	
Achievable SIL	SIL 2 (single-channel) SIL 3 (two-channel) Depends on the parameterization and wiring (see Section "Connection options for actuators depending on the parameterization" on page 2-5 and Section "Connection examples for safe outputs" on page 6-1)
Probability of a dangerous failure on demand by the safety function (PFD)	SIL 2: 1% of 10 <sup>-2</sup> , maximum (corresponds to 1 x 10 <sup>-4</sup> ) SIL 3: 1% of 10 <sup>-3</sup> , maximum (corresponds to 1 x 10 <sup>-5</sup> )
Probability of a dangerous failure per hour for the entire module (PFH)	SIL 2: 1% of 10 <sup>-6</sup> , maximum (corresponds to 1 x 10 <sup>-8</sup> ) SIL 3: 1% of 10 <sup>-7</sup> , maximum (corresponds to 1 x 10 <sup>-9</sup> ) Depends on the parameterization (see Table 6-3 on page 6-3)
Hardware fault tolerance (HFT) of the module	1
Permissible duration of use	20 years



### Safety characteristics according to DIN EN 62061

Achievable SIL claim limit	SIL CL = SIL 2 (single-channel) SIL CL = SIL 3 (two-channel) Depends on the parameterization and wiring (see Section "Connection options for actuators depending on the parameterization" on page 2-5 and Section "Connection examples for safe outputs" on page 6-1)
Safe failure fraction (SFF)	99%
Probability of a dangerous failure per hour for the entire module (PFH)	SIL CL 2: 1% of $10^{-6}$ , maximum (corresponds to $1 \times 10^{-8}$ ) SIL CL 3: 1% of $10^{-7}$ , maximum (corresponds to $1 \times 10^{-9}$ ) 1% of $10^{-7}$ , maximum (corresponds to $1 \times 10^{-9}$ ) Depends on the parameterization (see Table 6-3 on page 6-3)
Hardware fault tolerance (HFT) of the module	1
Permissible duration of use	20 years

### Safety characteristics according to EN ISO 13849-1

Achievable performance level	PL e (two-channel) PL d (single-channel) Depends on the parameterization and wiring (see Section "Connection options for actuators depending on the parameterization" on page 2-5 and Section "Connection examples for safe outputs" on page 6-1) See also Section "Achievable safety depending on the modules used" on page A-25.
Diagnostic coverage (DC)	99%
Mean time to dangerous failure (MTTFd)	For single-channel assignment: 100 years For two-channel assignment: 100 years

### Supply voltage $U_L$ (logic)



The safety terminal is supplied with communications power via the bus coupler, an Inline controller or a designated power terminal in the station. Potential routing is used for the communications power in the Inline station. For technical data, please refer to the data sheet for the bus coupler, Inline controller or power terminal used.

Current consumption	230 mA, maximum
---------------------	-----------------

### Supply voltage $U_M$ (actuators)



The safety terminal is supplied with main voltage  $U_M$  via the bus coupler, an Inline controller or a power terminal in the station. Potential routing is used for the main voltage in the Inline station. For technical data, please refer to the data sheet for the bus coupler, Inline controller or power terminal used.



#### **WARNING: Loss of the safety function when using unsuitable power supplies**

Only use power supplies according to EN 50178/VDE 0160 (PELV).

Nominal voltage	24 V DC according to EN 61131-2 and EN 60204
Tolerance	-15%/+20% including an entire AC voltage component with peak value of 5%
Ripple	3.6 V <sub>PP</sub>
Permissible voltage range	19.2 V DC to 30.0 V DC, ripple included
Current consumption	30 mA, typical (all outputs set) (plus actuator current)
Permissible interruption time	10 ms Within this time, the output voltage for the safe outputs fails as the outputs are not internally buffered.
Surge protection	Yes (in the bus coupler/power terminal)
Protection against polarity reversal	Yes (in the bus coupler/power terminal)

**Supply voltage  $U_M$  (actuators) (continued)**



**NOTE: Module damage due to polarity reversal**

Polarity reversal places a burden on the electronics and, despite protection against polarity reversal, can damage the module. Therefore, polarity reversal must be prevented.

Undervoltage detection	Yes, at 17 V, approximately
Diagnostic indicators	Green $U_M$ LED (see "Local diagnostic and status indicators" on page 2-6)
External protection	8 A slow-blow, maximum



**NOTE: Module damaged when overloaded**

The power supply unit must be able to supply four times (400%) the nominal current of the external fuse.

**Safe digital outputs OUT0 to OUT3**

Number	4 two-channel or 8 single-channel (positive switching)
Supply	From supply voltage $U_M$
Maximum output current per output	2 A
Maximum output current for all outputs (total current)	6 A (observe derating and maximum output current for each group)
Maximum output current for each group (total current)	
Group 1 (OUT0_K1, OUT1_K1, OUT2_K1, OUT3_K1)	3 A
Group 2 (OUT0_K2, OUT1_K2, OUT2_K2, OUT3_K2)	3 A
Maximum output voltage in the low state	< 5 V



**WARNING: Loss of safety function**

At this voltage, the load must not switch to or remain in the ON state. Please take this into consideration when selecting the actuator.

Maximum leakage current in the low state	2 mA
--	------



**WARNING: Loss of safety function**

At this current, the load must not switch to or remain in the ON state. Please take this into consideration when selecting the actuator.

Minimum withstand voltage of the connected loads	> 5 V
Maximum inductive load	1 H

**Safe digital outputs OUT0 to OUT3 (continued)**

Maximum capacitive load depending on the current


$$C = 1 \text{ s}/(R \times 1400)$$

Where:

C Load capacity in F

R Load resistance in ohms

Maximum capacitive load depending on the load current

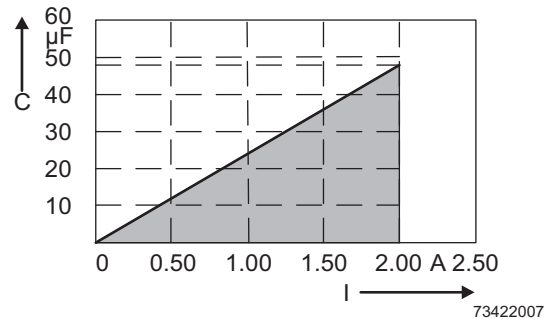

Key:

C Load capacity in µF

I Load current in A

Shaded area: permissible range

Minimum load	1.5 kΩ (16 mA at 24 V)
Limitation of the voltage induced on circuit interruption	-15 V
Output voltage	U <sub>M</sub> - 1 V, approximately
Simultaneity	100% up to 45°C (observe maximum current load)
Derating	Up to 50°C, total current of all outputs 6 A, maximum Up to 55°C, total current of all outputs 4 A, maximum
Maximum switching frequency	1 Hz; 0.2 Hz at > 1 A
Filter time	None
Switch-off delay for shutdown according to stop category 1	Can be parameterized; 150 ms to 630 s; see Section "Parameterization of the safe outputs" on page 5-2 Accuracy ±5% of the parameterized value
Maximum duration of the test pulses (when switched off; active driving)	1 ms
Maximum duration of the test pulses (when switched on)	3 ms, maximum (depending on the load capacity)
Status indicators	One green LED (two-color LED green/red) per output (see "Local diagnostic and status indicators" on page 2-6)
Diagnostic indicators	One red LED (two-color LED green/red) per output (see "Local diagnostic and status indicators" on page 2-6)



**WARNING: Loss of safety function**

- Connect the ground of the actuator directly to the ground terminal point of the corresponding output on the Inline plug. An external ground may not be used.
- The connected load must not respond in a hazardous way to test pulses.

**Electrical isolation/isolation of the voltage areas**



To provide electrical isolation between the logic level and the I/O area, it is necessary to supply the bus coupler and this safety module from separate power supply units. Interconnection of the power supply units in the 24 V area is not permitted. (See also IL SYS INST UM E user manual.)

**Separate potentials in the system consisting of bus coupler/power terminal and safety module**

**- Test distance**

5 V supply incoming remote bus/7.5 V supply (bus logic)

5 V supply outgoing remote bus/7.5 V supply (bus logic)

7.5 V supply (bus logic)/24 V supply  $U_M$ , FE

**- Test voltage**

500 V AC, 50 Hz, 1 min.

500 V AC, 50 Hz, 1 min.

500 V AC, 50 Hz, 1 min.

**Approvals**

For the latest approvals, please visit [www.phoenixcontact.net/products](http://www.phoenixcontact.net/products).

## 10.3 Conformance with EMC Directive

**Conformance with EMC Directive 2004/108/EC**

**Noise immunity test according to DIN EN 61000-6-2**

Electrostatic discharge (ESD)	EN 61000-4-2 (IEC 61000-4-2)	Criterion B 6 kV contact discharge, 8 kV air discharge
Electromagnetic fields	EN 61000-4-3 (IEC 61000-4-3)	Criterion A, field strength 10 V/m
Fast transients (burst)	EN 61000-4-4 (IEC 61000-4-4)	Criterion B, test voltage 2 kV
Surge voltage	EN 61000-4-5 (IEC 61000-4-5)	Test intensity 2, Criterion B DC supply lines: 0.5 kV/0.5 kV (symmetrical/asymmetrical) Signal lines: 1.0 kV/2.0 kV (symmetrical/asymmetrical)
Conducted interference	EN 61000-4-6 (IEC 61000-4-6)	Criterion A, test voltage 10 V

**Noise emission test according to DIN EN 61000-6-4**

Noise emission	EN 55011	Class A, industrial applications
----------------	----------	----------------------------------

## 10.4 Ordering data

### 10.4.1 Ordering data: safety module

Description	Type	Order No.	Pcs. / Pkt.
Inline module with integrated safety logic and safe digital outputs	IB IL 24 LPSDO 8 V3-PAC	2701625	1

### 10.4.2 Ordering data: accessories

Description	Type	Order No.	Pcs. / Pkt.
Plug set as replacement item	IB IL 24 SDO 8-PLSET/CP	2916927	1 set
Plug set consisting of four Inline plugs with integrated discharge electronics	IB IL 24 PSDO 8-PLSET/CP/R	2700722	1 set

### 10.4.3 Ordering data: software

Description	Type	Order No.	Pcs. / Pkt.
Parameterization and configuration tool	SAFECONF	2986119	1



The software can be downloaded free of charge at [www.phoenixcontact.net/products](http://www.phoenixcontact.net/products).

### 10.4.4 Ordering data: documentation

Description	Type	Order No.	Pcs. / Pkt.
<b>Inline</b>			
User manual Automation terminals of the Inline product range	IL SYS INST UM E	2698724	1
Quick start guide			1



The quick start guides can be downloaded free of charge at [www.phoenixcontact.net/products](http://www.phoenixcontact.net/products).



Make sure you always use the latest documentation.  
It can be downloaded at [www.phoenixcontact.net/products](http://www.phoenixcontact.net/products).

# A Appendix: SafetyBridge system

## A 1 The SafetyBridge system

### A 1.1 SafetyBridge technology – maximum flexibility and safety

In all safety applications in which conventional safety relays are not flexible enough, parallel wiring proves too complex due to the expansiveness of the safety circuits or the use of a safe bus system in conjunction with a safe controller is cost-prohibitive, SafetyBridge technology from Phoenix Contact offers a cost-effective solution.

The SafetyBridge system works independently of the relevant network type and the type of standard control system used. Both simply act as a transport medium for safe data packets, which are exchanged between the safe input and safe output modules. The safe inputs and outputs are distributed in the network and do not require a higher-level safety controller or a separate safety bus system. Therefore, instead of having to choose a safe network such as PROFIsafe or CIP Safety with the relevant available safety controllers, users can instead continue to use the systems or technologies they have come to rely on. This means that a hitherto unseen level of flexibility can be achieved in bus-based safety applications.

#### **Direct processing of safety operations in the module**

SafetyBridge technology has been integrated into the proven Inline I/O system. Other than the standard guidelines specified in IL SYS INST UM E no special installation guidelines have to be observed when installing the corresponding modules. They can be distributed in the network and operated at any point in the I/O station. Due to the technology used, a special bus coupler is not required as the safety operations are processed directly in the IB IL 24 LPSDO 8 V3-PAC intelligent safe output module. Thanks to the comprehensive range of parameterization options, the input or output channels can be adapted flexibly to the relevant application. Data transmission over the network from the safe input module to the output module is protected by a special protocol, which is operated by the intelligent output module. In the standard control system type, a handling functional block must be called to forward the data. Like the network used, it does not perform any safety-related tasks.

#### **Easy configuration of the safety logic**

The safety mechanisms used in the SafetyBridge system, such as the “black channel” principle, are based on proven technologies that have been used for many years in the INTERBUS-Safety and PROFIsafe systems. With appropriate parameterization, applications up to Cat. 4/SIL 3/SIL CL 3/PL e can be implemented. The SAFECONF software enables convenient parameterization of the safe input and output channels and creation of the safety logic. The tool does not require programming experience, as predefined functional blocks are available for virtually every application. SafetyBridge technology can be used to implement distributed safety applications cost-effectively in a network independently of the network and standard control system.

### A 1.2 Overview of SafetyBridge system features

- Independent of the network type
- Independent of the controller type
- No higher-level safety controller required
- Maximum of 16 connections to satellites
- All data, including parameterizations, is located on the standard control system
- Only the IB IL 24 LPSDO 8 V3-PAC module is parameterized by the standard control system
- The SAFECONF parameterization tool can be downloaded free of charge (see Section “Ordering data” on page 10-7)
- Enable principle
- Standard control system can access all safe signals and diagnostic data

### A 1.3 Differences in SafetyBridge systems depending upon which module with integrated safety logic is used

Table A-1 SafetyBridge system specifications

Functionality	IB IL 24 LPSDO 8 V2-PAC	IB IL 24 LPSDO 8 V3-PAC
Supported networks	<ul style="list-style-type: none"> <li>- INTERBUS</li> <li>- PROFIBUS</li> <li>- PROFINET</li> <li>- EtherNet/IP™</li> <li>- Modbus TCP</li> <li>- DeviceNet™</li> <li>- CANopen®</li> <li>- sercos III</li> </ul>	<ul style="list-style-type: none"> <li>- INTERBUS</li> <li>- PROFIBUS</li> <li>- PROFINET</li> <li>- EtherNet/IP™</li> <li>- Modbus TCP</li> <li>- DeviceNet™</li> <li>- sercos III</li> </ul>
Number of safe communications	5 IN/OUT (mixed)	16 IN/OUT (mixed)
Size of memory for the safety logic	20 kB	30 kB
Retentive storage	Yes	Yes

Table A-1 SafetyBridge system specifications

Functionality	IB IL 24 LPSDO 8 V2-PAC	IB IL 24 LPSDO 8 V3-PAC
Safe functional blocks	<ul style="list-style-type: none"> <li>- Antivalent</li> <li>- EDM</li> <li>- EnableSwitch</li> <li>- Equivalent</li> <li>- ESPE</li> <li>- E-STOP</li> <li>- GuardLocking</li> <li>- GuardMonitoring</li> <li>- ModeSelector</li> <li>- MutingPar2Sensor</li> <li>- MutingPar</li> <li>- MutingSeq</li> <li>- TwoHandControl II</li> <li>- TwoHandControl III</li> </ul>	<ul style="list-style-type: none"> <li>- Antivalent</li> <li>- EDM</li> <li>- EnableSwitch</li> <li>- Equivalent</li> <li>- ESPE</li> <li>- E-STOP</li> <li>- GuardLocking</li> <li>- GuardMonitoring</li> <li>- ModeSelector</li> <li>- MutingPar2Sensor (incl. override)</li> <li>- MutingSeq (incl. override)</li> <li>- MutingPar (incl. override)</li> <li>- Reset</li> <li>- TestableSafetySensor</li> <li>- TwoHandControl II</li> <li>- TwoHandControl III</li> </ul>
Implicit enable	Yes	Yes
Mirroring of local safe output data	Yes	Yes
Forwarding of safe outputs	Yes	Yes
Supported satellites	<ul style="list-style-type: none"> <li>- IB IL 24 PSDI 8-PAC</li> <li>- IB IL 24 PSDO 8-PAC</li> <li>- IB IL 24 PSDO 4/4-PAC</li> <li>- IB IL 24 PSDOR 4-PAC</li> </ul> <p>For permissible revision, see Table A-2</p>	<ul style="list-style-type: none"> <li>- IB IL 24 PSDI 8-PAC</li> <li>- IB IL 24 PSDI 16-PAC</li> <li>- IB IL 24 PSDO 8-PAC</li> <li>- IB IL 24 PSDO 4/4-PAC</li> <li>- IB IL 24 PSDOR 4-PAC</li> <li>- IB IL 24 LPSDO 8 V3-PAC</li> </ul> <p>For permissible revision, see Table A-2</p>
Multiplexer mode	Yes	No
Support of partial configurations	Yes	Yes
Cross communication between the islands	No	Yes
Number of instances of safe functional blocks	31	96
Application diagnostics	1 byte	4 bytes
Application acknowledgment	2 bytes	4 bytes
Block diagnostics	No	Yes

**App-Diag-LPSDO (application diagnostics)**

The bits in this register can be freely programmed in SAFECONF. Implement diagnostics using these bits.



## IB IL 24 LPSDO 8 V3-PAC

### App-Ack-LPSDO (application acknowledgment for IB IL 24 LPSDO 8 V3-PAC)

The bits in this register can be freely programmed in SAFECONF and can be used for the safety logic. Implement application acknowledgment using these bits.


Table A-2 Revision as of which a module is approved for use on the logic module

Order No.	Type	Revision as of which a module is approved for use on the	
		IB IL 24 LPSDO 8 V2-PAC	IB IL 24 LPSDO 8 V3-PAC
2700994	IB IL 24 PSDI 16-PAC	-	00/100
2985688	IB IL 24 PSDI 8-PAC	00/200	00/200
2985631	IB IL 24 PSDO 8-PAC	01/200/100	01/200/100
2985864	IB IL 24 PSDOR 4-PAC	00/200/100	00/200/100
2916493	IB IL 24 PSDO 4/4-PAC	01/200/100	01/200/100
2701625	IB IL 24 LPSDO 8 V3-PAC	-	00/100/100

## A 2 System topology

### A 2.1 General topology

A SafetyBridge system can be integrated into various bus systems (e.g., INTERBUS, PROFINET, and PROFIBUS). The standard bus system is therefore supplemented by components to achieve safety.

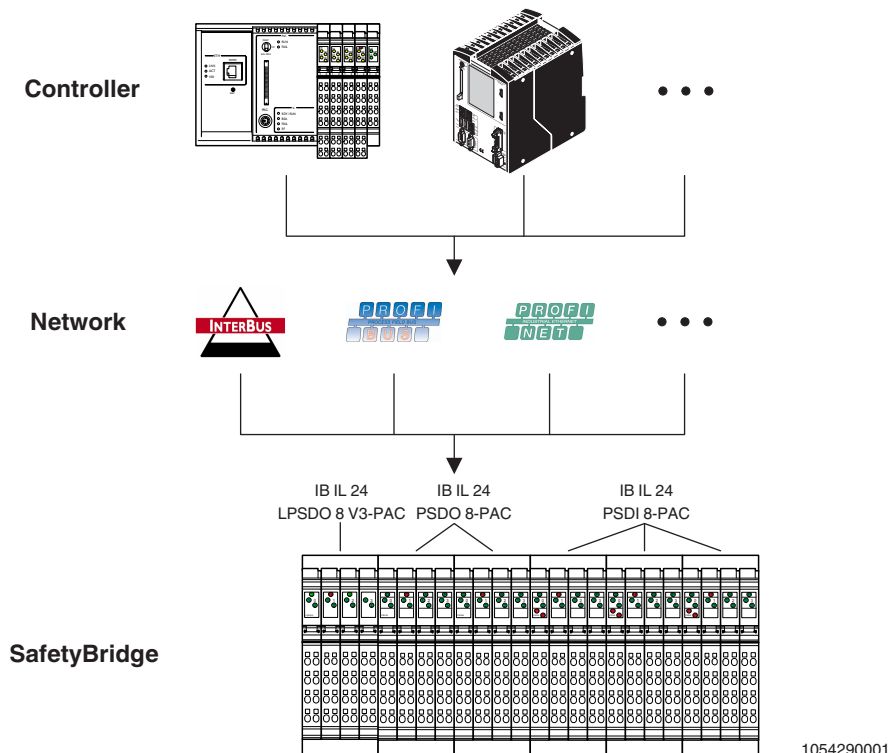

1054290001

Figure A-1 Independence from the network

<b>Control level</b>	A standard control system is used as the controller (see also Section “Network and controller requirements” on page A-6).
<b>I/O level</b>	Safe devices are integrated into the Inline station at I/O level. Safe and standard devices can be operated simultaneously in the overall system.
<b>Communication</b>	Communication takes place via the standard control system and the standard bus system using safe data packets.
<b>System</b>	The system consists of a standard control system and up to 31 SafetyBridge islands.

### SafetyBridge island

Each SafetyBridge island consists of one SafetyBridge module with integrated safety logic (IB IL 24 LPSDO 8 V3-PAC) and up to 16 distributed SafetyBridge modules (e.g., IB IL 24 PSDI ... -PAC, IB IL 24 PSDO...-PAC). The module with integrated safety logic is referred to as the island node, while the modules without safety logic are referred to as remote devices or satellites. Satellite is the preferred term to describe these modules and is used in this document.

The satellites and the IB IL 24 LPSDO 8 V3-PAC are assigned to an island using island numbers that are specified in the parameterization tool. The satellites are numbered in the order they are assigned in SAFECNF.

## A 2.2 Network and controller requirements

The SafetyBridge system does not place any special requirements on the standard control system. However, it must be able to perform the following tasks:

Network:

- Deterministic network

Controller:

- Fast enough that it can meet time expectations for the response time
- Sufficient memory to store configuration and parameter data records
- Data consistency is ensured over 24 words



Functional blocks for copying data and downloading the configuration are available for selected controllers. These can be found on the product page for the IB IL 24 LPSDO 8 V3-PAC at [www.phoenixcontact.net/products](http://www.phoenixcontact.net/products).

## A 2.3 Safe input and output devices

Safe input and output devices form the interface to the connected I/O devices. The devices control contactors or valves, for example, and/or read the input status of connected safety-related sensors.

The internal structure of the devices enables component failures, interruptions in transmission or the absence of data to be detected and reported immediately.

Even errors in the wiring or internal device errors can be detected. Errors are indicated via the process image of the devices, the functional blocks, and the device LEDs. They can be evaluated by the user.

The safe I/O devices are from the Inline product range. Their design and interfaces correspond to standard Inline I/O devices. This means that no additional installation effort is required.

The devices are parameterized using the SAFECNF software according to the safety function that is to be performed. The parameterization and wiring of the inputs and outputs depends on the application (e.g., single-channel or two-channel). For more detailed information on the parameterization options, please refer to the user manual for the relevant device. The wiring and parameterization of devices determines which errors are detected.

## A 2.4 Cross communication

The SafetyBridge V3 system supports cross communication between the islands. This is achieved exclusively by connecting the logic modules.

The IB IL 24 LPSDO 8 V3-PAC can be used as a SafetyBridge satellite with 16 safe inputs and outputs for a different IB IL 24 LPSDO 8 V3-PAC. The IB IL 24 LPSDO 8 V3-PAC SL (SL = slave) can be found in the hardware toolbox in SAFECONF.

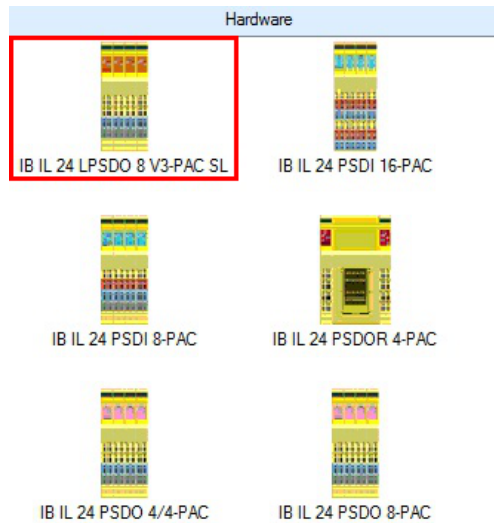


Figure A-2 SAFECONF hardware toolbox

Once you have inserted the IB IL 24 LPSDO 8 V3-PAC SL in the hardware editor, the module appears with 16 safe input and output signals.

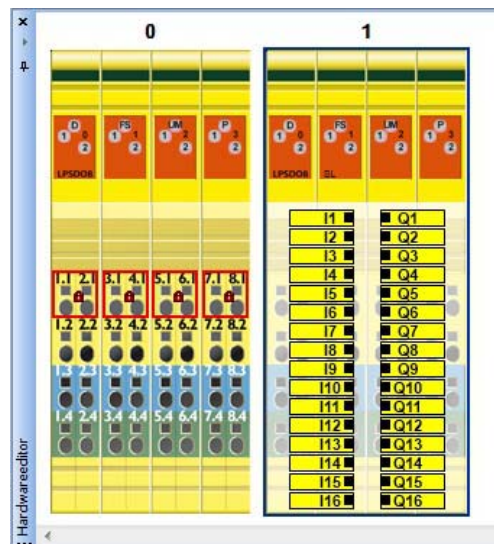


Figure A-3 SAFECONF project for the LPSDO V3 "master" module

In the parameterization dialog box for the IB IL 24 LPSDO 8 V3-PAC SL, set the number of the island that is now connected. This island number must match the switch position of the IB IL 24 LPSDO 8 V3-PAC for the connected island.

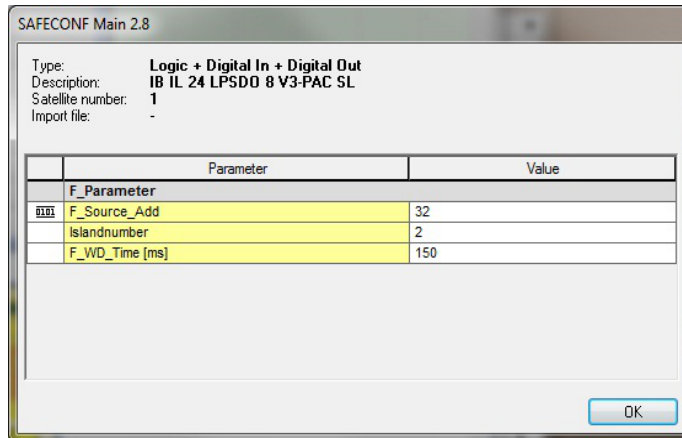


Figure A-4 Parameterization dialog box

The safe input and output signals are now available for the configuration of the safety function of the master IB IL 24 LPSDO 8 V3-PAC.

The 16 safe input and output signals represent the newly added safe external signals of the IB IL 24 LPSDO 8 V3-PAC SL module, which can be obtained from the “External signals” toolbox in the corresponding SAFECONF project for the IB IL 24 LPSDO 8 V3-PAC SL module.

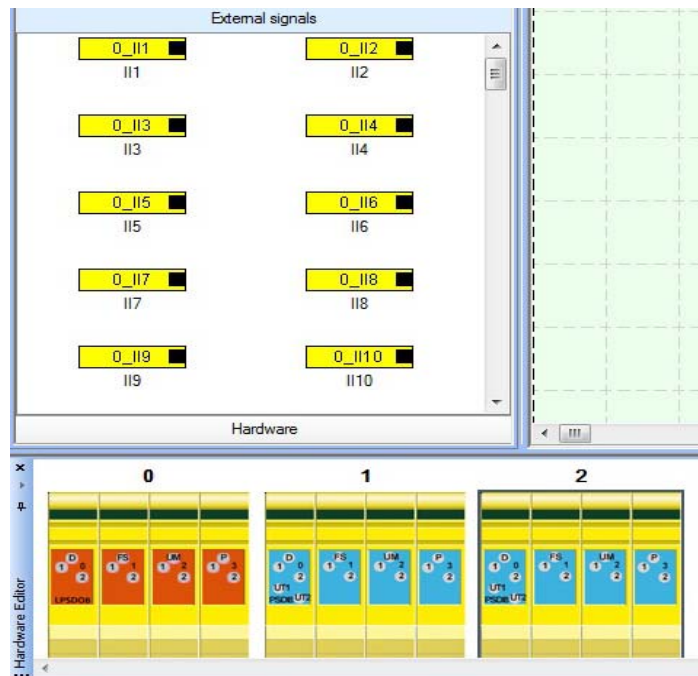


Figure A-5 SAFECONF project for the LPSDO V3 “slave” module

Cross communication output Q1 of the LPSDO V3 SL, in the master project, corresponds to cross communication input 0\_II1 of the LPSDO V3 SL project.

Up to 16 safe signals can therefore be exchanged bidirectionally between two IB IL 24 LPSDO 8 V3-PAC modules.

A master project can communicate with a maximum of 16 LPSDO V3 modules.



**NOTE: Special calculation of the total failure rate required**

If more than 6 islands are linked in series, special calculation of the total failure rate is required.

For each additional island, 2% of  $10^{-7}$  must be added to the PFH value.



**NOTE: Modified total response time**

When calculating the total safety response time, please note the modified basis for calculation in Section "Time response in the SafetyBridge system" on page A-22.

There are two variants that are used as the basis for creating master projects:

- Hierarchical topology
- Flat topology


Both variants can be combined.

**Example 1: hierarchical topology**

This example consists of 4 islands.

Table A-3 Hierarchical topology

Island	Master	Slave			
Island 1	LPSDO	LPSDO SL 1	LPSDO SL 2	LPSDO SL 3	
Island 2	LPSDO SL 1	PSDI 1	PSDI 2	PSDO 1	PSDO 2
Island 3	LPSDO SL 2	PSDI 1	PSDI 2	PSDO 1	PSDO 2
Island 4	LPSDO SL 3	PSDI 1	PSDI 2	PSDO 1	PSDO 2

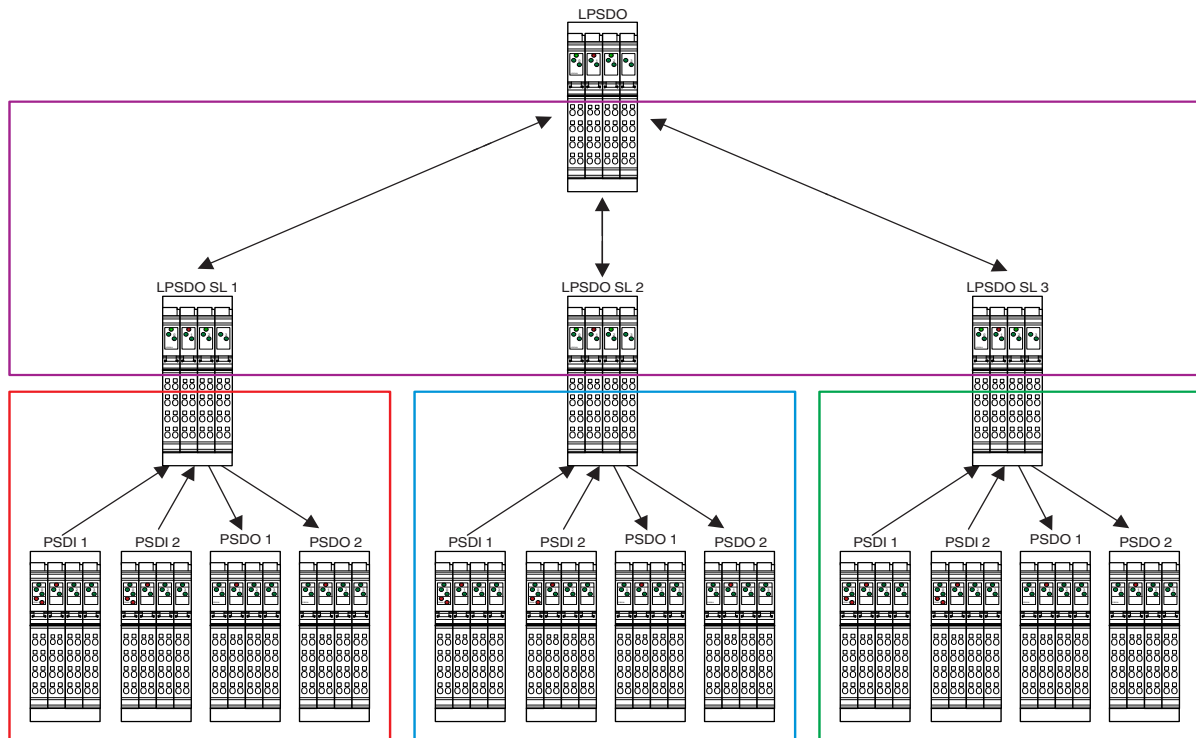

1054290002


Figure A-6 Hierarchical topology (tree structure)

**Example 2: flat topology**

This example consists of 3 islands.

Table A-4 Flat topology

Island	Master	Slave				
Island 1	LPSDO 1	LPSDO SL 2	PSDI 1	PSDI 2	PSDI 3	PSDO 1
Island 2	LPSDO SL 2	LPSDO SL 3	PSDI 1	PSDI 2	PSDO 1	
Island 3	LPSDO SL 3	PSDI 1	PSDI 2	PSDO 1	PSDO 2	

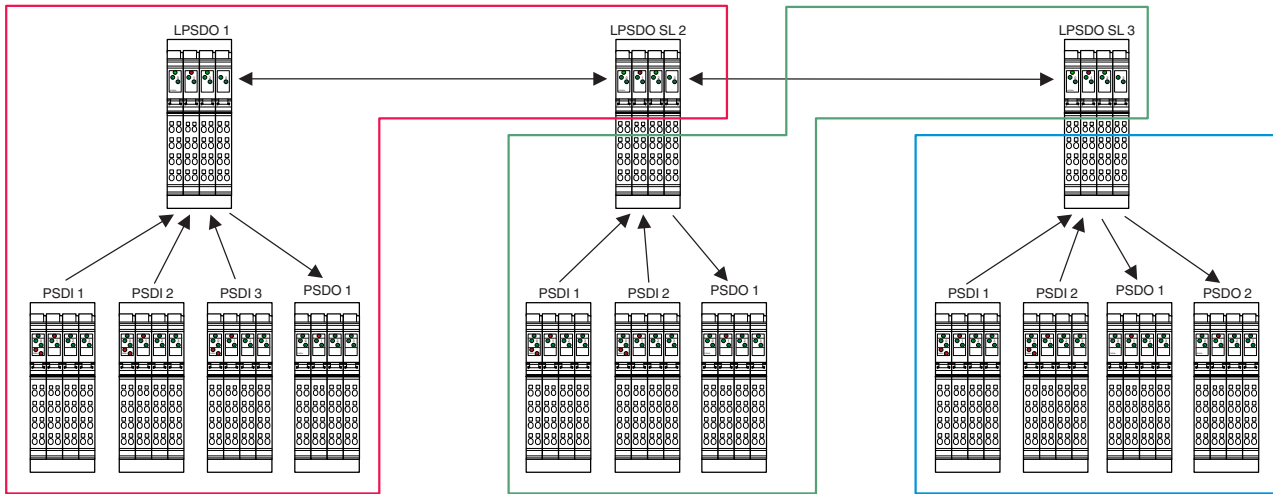

1054290003

Figure A-7 Flat topology (line structure)



### A 3 SafetyBridge address assignment



**NOTE: Malfunction in the event of incorrect addressing**  
 Make sure that in an overall system consisting of the SafetyBridge system and a PROFIsafe system, the addresses are unique. Duplicate address assignment is not permitted.



**NOTE: Malfunction during mixed operation**  
 During simultaneous use of SafetyBridge V1/V2 and SafetyBridge V3 on a controller, make sure that the island number of the SafetyBridge V3 system is  $\geq 8$ . This should be checked during overall validation of the system.

The SafetyBridge address of the IB IL 24 LPSDO 8 V3-PAC is the same as the island number of the module.

The SafetyBridge address of a satellite consists of the island number and the position in the bus navigator of the SAFECONF software tool.

Enter the address for the IB IL 24 LPSDO 8 V3-PAC in SAFECONF.



The switch position can be displayed in SAFECONF by right-clicking in the hardware editor and selecting "Display address switch".

Table A-5 SafetyBridge address IB IL 24 LPSDO 8 V3-PAC

SafetyBridge address									
Island number					Reserved				
9	8	7	6	5	4	3	2	1	0
$1_{dec}$ to $31_{dec}$					$0_{dec}$				

Table A-6 SafetyBridge address, e.g., IB IL 24 PSDI 8-PAC

SafetyBridge address									
Island number					Satellite number				
9	8	7	6	5	4	3	2	1	0
$1_{dec}$ to $31_{dec}$					$1_{dec}$ to $16_{dec}$				

Example:

Table A-7 Example 1: SafetyBridge addresses

	Island number					Satellite number					SafetyBridge address (F-Address)
	9	8	7	6	5	4	3	2	1	0	
<b>IB IL 24 LPSDO 8 V3-PAC</b>	$1_{dec}$					$0_{dec}$					$32_{dec}$ ( $20_{hex}$ )
	0	0	0	0	1	0	0	0	0	0	

Table A-7 Example 1: SafetyBridge addresses

	Island number					Satellite number					SafetyBridge address (F-Address)
<b>IB IL 24 PSDI ... -PAC Position 1</b>	1 <sub>dec</sub> (1 <sub>hex</sub> )					1 <sub>dec</sub> (1 <sub>hex</sub> )					33 <sub>dec</sub> (21 <sub>hex</sub> )
	0	0	0	0	1	0	0	0	0	1	
<b>IB IL 24 PSDO...-PAC Position 2</b>	1 <sub>dec</sub> (1 <sub>hex</sub> )					2 <sub>dec</sub> (2 <sub>hex</sub> )					34 <sub>dec</sub> (22 <sub>hex</sub> )
	0	0	0	0	1	0	0	0	1	0	

Table A-8 Example 2: SafetyBridge addresses

	Island number					Satellite number					SafetyBridge address
	9	8	7	6	5	4	3	2	1	0	
<b>IB IL 24 LPSDO 8 V3-PAC</b>	4 <sub>dec</sub> (4 <sub>hex</sub> )					0 <sub>dec</sub> (0 <sub>hex</sub> )					128 <sub>dec</sub> (80 <sub>hex</sub> )
	0	0	1	0	0	0	0	0	0	0	
<b>IB IL 24 PSDOR 4-PAC Position 1</b>	4 <sub>dec</sub> (4 <sub>hex</sub> )					1 <sub>dec</sub> (1 <sub>hex</sub> )					129 <sub>dec</sub> (81 <sub>hex</sub> )
	0	0	1	0	0	0	0	0	0	1	
<b>IB IL 24 PSDI ... -PAC Position 2</b>	4 <sub>dec</sub> (4 <sub>hex</sub> )					2 <sub>dec</sub> (2 <sub>hex</sub> )					130 <sub>dec</sub> (82 <sub>hex</sub> )
	0	0	1	0	0	0	0	0	1	0	
<b>IB IL 24 PSDO 4/4-PAC Position 3</b>	4 <sub>dec</sub> (4 <sub>hex</sub> )					3 <sub>dec</sub> (3 <sub>hex</sub> )					131 <sub>dec</sub> (83 <sub>hex</sub> )
	0	0	1	0	0	0	0	0	1	1	
<b>IB IL 24 PSDO 8-PAC Position 4</b>	4 <sub>dec</sub> (4 <sub>hex</sub> )					4 <sub>dec</sub> (4 <sub>hex</sub> )					132 <sub>dec</sub> (84 <sub>hex</sub> )
	0	0	1	0	0	0	0	1	0	0	
<b>IB IL 24 PSDI ... -PAC Position 5</b>	4 <sub>dec</sub> (4 <sub>hex</sub> )					5 <sub>dec</sub> (5 <sub>hex</sub> )					133 <sub>dec</sub> (85 <sub>hex</sub> )
	0	0	1	0	0	0	0	1	0	1	

**Example addresses**

Figure A-8 and Table A-9 illustrate examples of addresses in the SafetyBridge system for two islands.

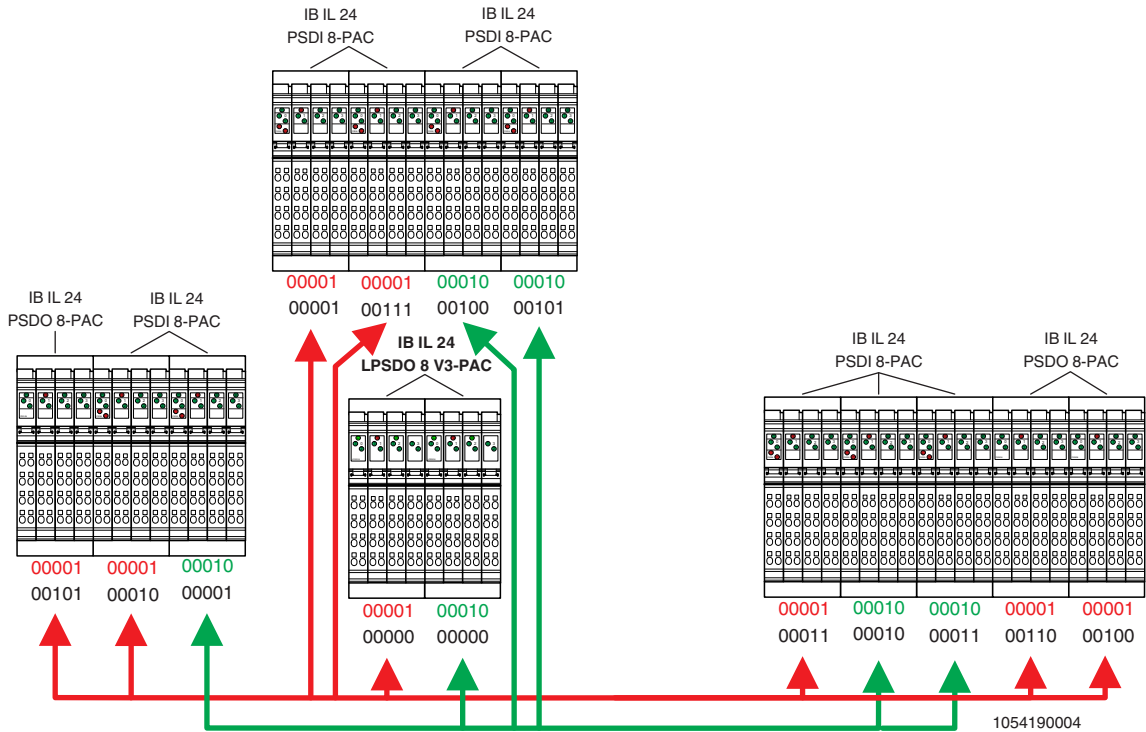


Figure A-8 Example addresses for SafetyBridge islands 1 and 2

All the addresses for island numbers 1 and 2 used in the example are listed in Table A-9. The addresses actually used in the example in Figure A-8 are in bold.

Table A-9 Example addresses for SafetyBridge islands

Addresses for island number 1 (red in Figure A-8)	Addresses for island number 2 (green in Figure A-8)	Device
<b>00001 00000</b> (20 <sub>hex</sub> )	<b>00010 00000</b> (40 <sub>hex</sub> )	IB IL 24 LPSDO 8 V3-PAC (island node)
00001 00001 (21 <sub>hex</sub> )	00010 00001 (41 <sub>hex</sub> )	Assigned IB IL 24 PSDI 8-PAC/IB IL 24 PSDI 8-PAC
00001 00010 (22 <sub>hex</sub> )	00010 00010 (42 <sub>hex</sub> )	Assigned IB IL 24 PSDI 8-PAC/IB IL 24 PSDI 8-PAC
00001 00011 (23 <sub>hex</sub> )	00010 00011 (43 <sub>hex</sub> )	Assigned IB IL 24 PSDI 8-PAC/IB IL 24 PSDI 8-PAC
00001 00100 (24 <sub>hex</sub> )	<b>00010 00100</b> (44 <sub>hex</sub> )	Assigned IB IL 24 PSDO 8-PAC/IB IL 24 PSDI 8-PAC

Table A-9 Example addresses for SafetyBridge islands

Addresses for island number 1 (red in Figure A-8)	Addresses for island number 2 (green in Figure A-8)	Device
00001 00101 (25 <sub>hex</sub> )	00010 00101 (45 <sub>hex</sub> )	Assigned IB IL 24 PSDO 8-PAC/IB IL 24 PSDI 8-PAC
00001 00110 (26 <sub>hex</sub> )		Assigned IB IL 24 PSDO 8-PAC
00001 00111 (27 <sub>hex</sub> )		Assigned IB IL 24 PSDI 8-PAC

The graphics below show the red and green project in the hardware editor in SAFECONF. The DIP switch position can be displayed here.



The switch position can be displayed in SAFECONF by right-clicking in the hardware editor and selecting "Display address switch".

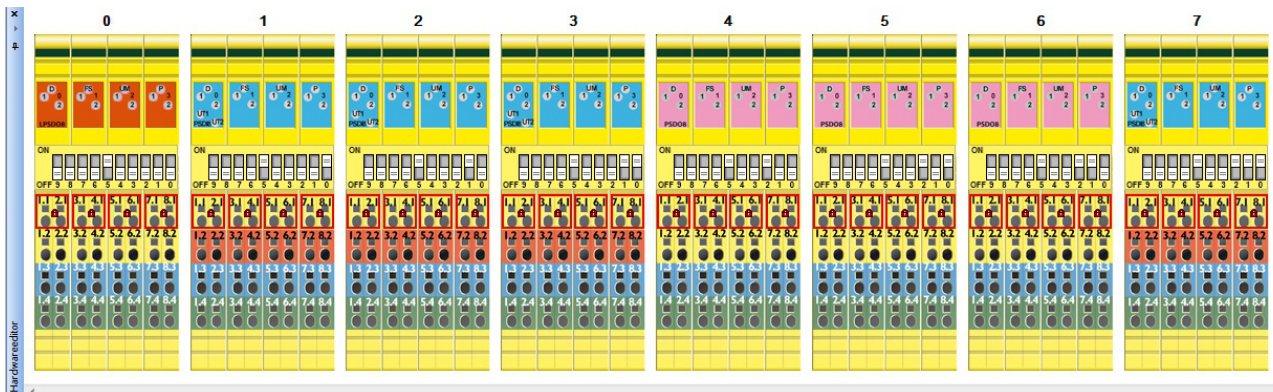


Figure A-9 DIP switch position of island number 1 (red in Figure A-8) in SAFECONF

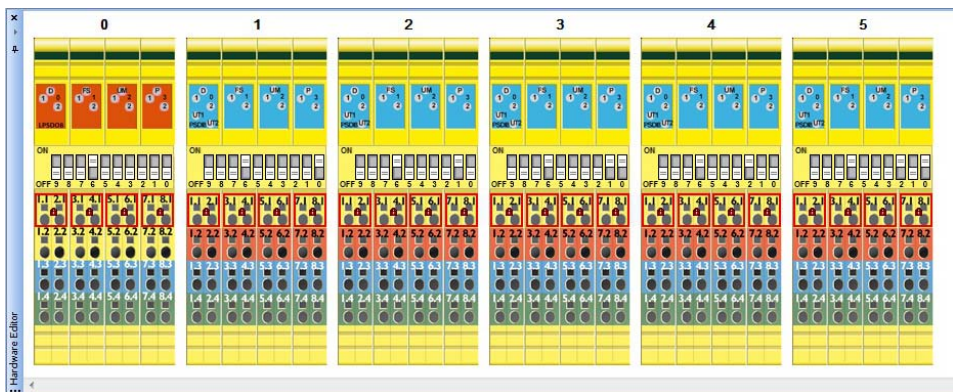


Figure A-10 DIP switch position of island number 2 (green in Figure A-8) in SAFECONF

## A 4 SafetyBridge V3 system handling in various control systems

The functions of a SafetyBridge island are mapped to the relevant control systems using handling functional blocks.

The handling functional blocks for the relevant controller types, including the documentation, can be found at [www.phoenixcontact.net/products](http://www.phoenixcontact.net/products).

## A 5 Enable principle

The enable principle is implemented in the SafetyBridge system. For this, all modules with local outputs have an enable function integrated in the device firmware (ANDed bit-by-bit) for each local safe output channel. The enable function can be parameterized (enabled/disabled) for each specific channel.

When the enable function is enabled, the relevant safe local output is ANDed bit-by-bit with the corresponding standard output of the standard control system. This output is then only set if the result of the safety function calculation permits this and the standard control system has set the corresponding output.

The enable function is performed according to the single-channel or two-channel parameterization of the safe outputs.



The enable function is not graphically represented in SAFECONF in the safety logic editor. Parameterize the enable function when parameterizing the channels.



**NOTE: Disabling of the safety function**

When validating the overall safety function, make sure that the safety function is not disabled by the safety-related components or by the standard components.

The following figure illustrates the enable principle.

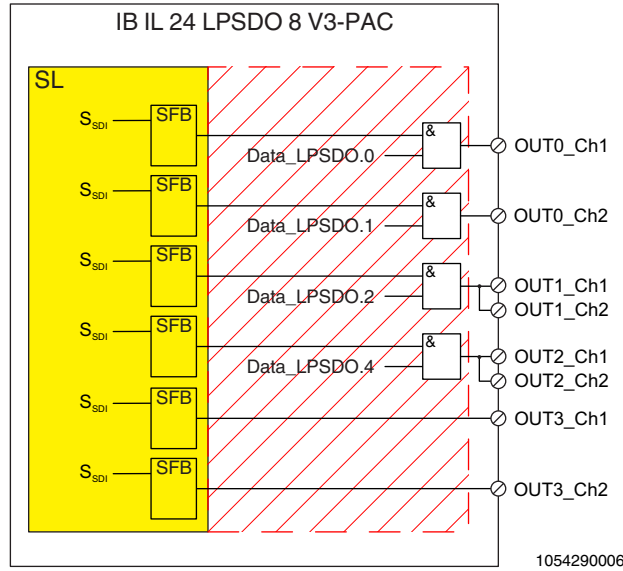


Figure A-11 Enable principle (example)


SL	Safety logic
SFB	Safe functional block
&	Standard functional block for ANDING
S <sub>SDI</sub>	Signal from the IB IL 24 PSDI ... -PAC safe input module
Data-LPSDO.x	Standard data of the standard control system, which is to enable the IB IL 24 LPSDO 8 V3-PAC; bit x
OUT <sub>x</sub> _Ch <sub>y</sub>	Output x, channel y
	Internal sequences

Table A-10 Parameterization of output channels for the example in Figure A-11

Output/channel	Output	Enable
OUT0_Ch1	Single-channel	Enabled
OUT0_Ch2	Single-channel	Enabled
OUT1_Ch1	Two-channel	Enabled
OUT1_Ch2	Two-channel	Enabled
OUT2_Ch1	Two-channel	Enabled
OUT2_Ch2	Two-channel	Enabled
OUT3_Ch1	Single-channel	Disabled
OUT3_Ch2	Single-channel	Disabled

## A 6 Diagnostics

In addition to precise diagnostics for the standard bus system, the safe input and output devices also support the detection of I/O errors and device errors.

### A 6.1 Error detection in I/O devices

#### Safe inputs

Depending on the device type and parameterization, the following errors can be detected at safe inputs:

- Short circuit
- Cross circuit
- Overload/short circuit of the clock outputs

When an error is detected at an input, the safe state is set for this input and a "0" is transmitted in the input data of the input ("0" = safe state).

The corresponding error message is transmitted to the IB IL 24 LPSDO 8 V3-PAC and the standard control system.



For more detailed information on error detection at the safe inputs, please refer to the user manual for the IB IL 24 PSDI ... -PAC.

#### Safe outputs

Depending on the device type and parameterization, the following errors can be detected at safe outputs:

- Short circuit
- Cross circuit
- Overload

When an error is detected at an output, the affected output is disabled ("0" = OFF = safe state).

The corresponding error message is transmitted to the IB IL 24 LPSDO 8 V3-PAC and the standard control system.



For more detailed information on error detection at the safe outputs, please refer to the user manual for the IB IL 24 PSDO...-PAC modules.

## A 6.2 Detection of device errors

All serious errors that can result in the loss of or adversely affect the safety function cause the entire device to enter the safe state. The FS LED on the safe device is permanently on.

Depending on the device type, the following errors result in the safe state:

- Hardware fault in the circuit
- User error
- Module overload
- Overheating
- Faulty supply voltage

The corresponding error message is transmitted to the IB IL 24 LPSDO 8 V3-PAC and the standard control system.



To determine which errors are detected by a specific device, please refer to the corresponding device documentation.

## A 6.3 Acknowledgment of error messages for satellites

Errors that occur on satellites are acknowledged via the standard control system on the IB IL 24 LPSDO 8 V3-PAC (see Section “SafetyBridge V3 system handling in various control systems” on page A-16). The acknowledgment is forwarded to the satellites.



An example for the acknowledgment of error messages can be found in the quick start guides for the IB IL 24 LPSDO 8 V3-PAC (see Section “Ordering data: documentation” on page 10-7).



## A 7 Configuration, parameterization, and download



An example for configuration, parameterization, and download can be found in the quick start guides for the IB IL 24 LPSDO 8 V3-PAC (see Section “Ordering data: documentation” on page 10-7).

### A 7.1 Configuration and parameterization using the SAFECONF software tool

The SAFECONF software tool is available to users for configuring the safety logic and parameterizing the channels of the safety modules used. Configuration and parameterization can be carried out offline, without connecting to the safety modules.

#### Configuration

During configuration, select the modules, set the island numbers, and connect the safety function in SAFECONF.

#### Parameterization

To parameterize the system, parameterize each input and output of the system. You must also set the watchdog time for each satellite.

#### Configuration and parameter data record

The safe configuration and parameterization user interface of SAFECONF generates a data record containing the configuration and parameterization data for all the modules of a SafetyBridge island in the format specific to the controller. So that data consistency and uniqueness can be checked, suitable means such as addresses, module IDs, and CRCs are included in the configuration and parameter data record.

Import this configuration and parameter data record into the standard control system used according to the controller.

On every power up, make this data record available to the IB IL 24 LPSDO 8 V3-PAC island node (see Section “Downloading the configuration and parameter data record” on page A-21). The IB IL 24 LPSDO 8 V3-PAC module is parameterized in this way. The satellites are parameterized automatically by the IB IL 24 LPSDO 8 V3-PAC module.

SAFECONF can be used as a stand-alone tool. However, depending on the control system, calling SAFECONF can also integrate the transfer of the configuration and parameter data record deeper into the relevant control system.



E-Learning tutorials and online help are available for the SAFECONF software tool.



SAFECONF should also be used in the planning phase. If the size of the configuration and parameter data record for the planned safety functions exceeds the memory size, an error message is displayed and changes can be made at an early stage.

To roughly estimate the memory required, please use the information in Section “Memory sizes for the safety logic” on page A-28.

## A 7.2 Downloading the configuration and parameter data record

The entire configuration and parameterization can be created offline with SAFECONF. A fully installed system is not required until the download stage. Communication must be running when transmitting the data record; a soft reset is performed automatically (during which the D LED lights up).

**WARNING: Loss of safety function**

Before downloading a data record, check whether the current data record is actually loaded.

Make sure that you do not overwrite the data record on the IB IL 24 LPSDO 8 V3-PAC with an old data record.

During startup, do not configure a delete service for a configuration and parameter data record. Before overwriting a data record, always read back the project header first.



Make sure that you are sending the correct data record to the correct IB IL 24 LPSDO 8 V3-PAC. If a data record is sent to an IB IL 24 LPSDO 8 V3-PAC for which it was not intended, an error message is displayed in the diagnostic output of the handling block.

## A 8 Safe state

The safe state:

- For safe output devices, the safe state is the power off state at the affected output terminals.
- For safe input devices, the safe state is the transmission of the “safe state value” (“0”) in the image of the affected inputs to the affected logic module.
- For transmission on the bus, the safe state is the transmission of the value “0”.

The safe state can be a normal operating state or is set if a corresponding error has been detected.

## A 9 Time response in the SafetyBridge system

In the planning phase of the machine/system and the SafetyBridge system, specify the required shutdown time for each safety function. This is ascertained on the basis of the safety evaluation of the machine/system, taking into consideration the safety distances and the approach speed. Observe the applicable standards and regulations.

In the planning phase of the planned SafetyBridge system, also calculate the shutdown time for the outputs.

Then, for each safety function, check whether, in conjunction with all other components, the calculated shutdown time is sufficient to ensure compliance with the required shutdown time for the safety function.

The aim of the calculations is to ensure that the safety function responds within the required time.

### A 9.1 Typical response time

The typical response time of the SafetyBridge system is the time that elapses from the signal being applied at the safe input terminal to the response at the safe output terminal. This time can usually only be achieved and measured during error-free operation of the SafetyBridge system.

The typical response time of the SafetyBridge system is not relevant and not suitable for dimensioning safety distances.

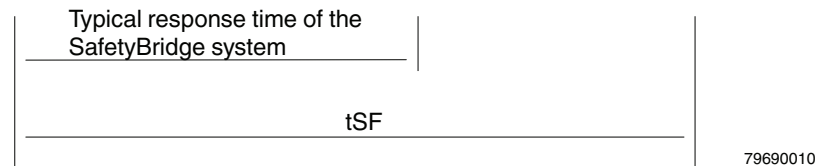


Figure A-12 Typical response time and required shutdown time for the safety function

Table A-11 Key for formula and Figure A-13

Abbreviation	Meaning	Note
$t_{SF}$	Required shutdown time for the safety function	Determined from the application, e.g., from the required times according to the distance of a light grid



The typical response time depends on the network and standard control system used.

### A 9.2 Shutdown times

The **required** shutdown time is determined based on your safety application.

The shutdown time **guaranteed** by the SafetyBridge system ( $t_G$ ) for the safety function is based on the longest processing time of the safe inputs involved in the safety function and the shutdown time of the safe output (single-channel or two-channel) involved.

For the processing time of the safe inputs, please refer to the corresponding data sheets for the safe input devices.

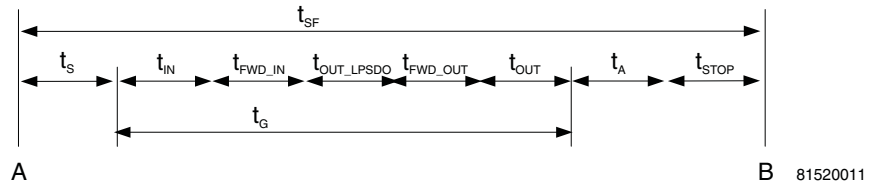


Figure A-13 Overview of shutdown times when using a SafetyBridge island

This results in the following formula for  $t_{SF}$

$$t_{SF} = t_S + t_{IN} + t_{FWD\_IN} + t_{OUT\_LPSDO} + t_{FWD\_OUT} + t_{OUT} + t_A + t_{STOP}$$

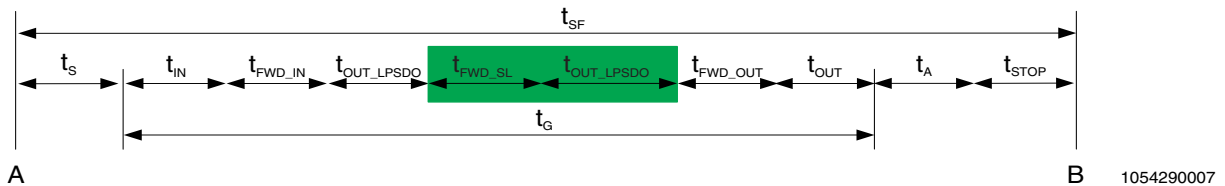


Figure A-14 Overview of the shutdown time when using several SafetyBridge islands

For example, when two islands are linked, the resulting formula for  $t_{SF}$  is:

$$t_{SF} = t_S + t_{IN} + t_{FWD\_IN} + t_{OUT\_LPSDO} + t_{FWD\_SL} + t_{OUT\_LPSDO} + t_{FWD\_OUT} + t_{OUT} + t_A + t_{STOP}$$

The values  $t_{FWD\_SL} + t_{OUT\_LPSDO}$  may deviate for each island. This is why the values  $t_{FWD\_SL} + t_{OUT\_LPSDO}$  must be added for each island.



A maximum of 5 serial chains of IB IL 24 LPSDO 8 V3-PAC modules may be implemented within a safety function!

Table A-12 Key for formula and Figure A-13

Abbreviation	Meaning	Note
A	Demand of the safety function	
B	Safe state of the system	
$t_{SF}$	Required shutdown time for the safety function	Determined from the application, e.g., from the required times according to the distance of a light grid
$t_S$	Response time of the sensor	Sensor data sheet
$t_{IN}$	Processing time of the input	User manual for the safe input module

Table A-12 Key for formula and Figure A-13

Abbrevia- tion	Meaning	Note
$t_{FWD\_IN}$	F-Watchdog time (communication)	Specified by the user in SAFECONF for each IB IL 24 PSDI ... -PAC module
$t_{FWD\_SL}$	F-Watchdog time (slave)	Specified by the user in SAFECONF for each IB IL 24 PSDI ... -PAC module
$t_{OUT\_LPSDO}$	Shutdown time of the IB IL 24 LPSDO 8 V3-PAC	15 ms; see technical data "SafetyBridge system" on page 10-1
$t_{FWD\_OUT}$	F-Watchdog time (communication)	Specified by the user in SAFECONF for each IB IL 24 PSDO...-PAC module. Without forwarding to a satellite with outputs, $t_{FWD\_OUT} = 0$ .
$t_{OUT}$	Shutdown time of the output	User manual for the safe output module. Without forwarding to a satellite with outputs, $t_{OUT} = 0$ .
$t_A$	Response time of the actuator	Actuator data sheet
$t_{STOP}$	Stopping time of the machine	Measurement
$t_G$	Guaranteed shutdown time	



Fluctuations in network communication and in the copy routines (e.g., including controller STOP) result in safe communication being aborted.

$t_{FWD}$

The F-Watchdog time ( $t_{FWD}$ ) is specified for each communication relationship in SAFECONF.

The minimum achievable  $t_{FWD}$  depends on the network and the controller (see documentation for the controller used).



When specifying the F-Watchdog time, please remember that it can be affected by future system expansions.

Within  $t_{FWD}$ , the standard network and the standard control system must be able to transmit telegrams from satellites to the IB IL 24 LPSDO 8 V3-PAC.

$t_s, t_{IN}$



If **several sensors** are involved in the safety function, the longest response time of the sensors involved is included in the calculation.

If **several inputs** are involved in the safety function, the longest processing time of the inputs involved is included in the calculation.

If **several IB IL 24 PSDI ... -PAC** devices are involved in a safety function, the longest F-Watchdog time is included in the calculation.

## A 10 Achievable safety depending on the modules used



Phoenix Contact recommends using the SISTEMA software utility to determine the achievable safety.

The SISTEMA software utility for the safety of control systems on machines can be downloaded free of charge from the website for the Institute for Occupational Safety and Health of the German Social Accident Insurance, see <http://www.dguv.de/ifa/en/prs/softwa/sistema/index.jsp>.

This Windows tool provides assistance in evaluating the safety of control systems within the scope of EN ISO 13849-1.

According to SISTEMA, performance level PL e can be achieved with the maximum configuration of 5 serial chains (6 x IB IL 24 LPSDO 8 V3-PAC plus the relevant satellites). However, you should always check your actual application to ascertain the level of safety that can be achieved.

## A 11 Behavior in the event of an error

### Error messages

Errors that occur on the safe devices can be detected using process data, functional blocks, device LEDs, and SAFECONF in online mode.

These error messages can be evaluated in the standard application program or can be displayed by means of a visualization.



For instructions on how to proceed in the event of an error, please refer to Section “Acknowledging an error” on page 8-7.

### Service information

In addition to error messages, service information can also be output. This information takes the form of device message warnings that do not affect the safety function. These warnings are either unacknowledged messages or messages that are acknowledged via the controller.

### Error classes

The response of all devices connected to the system and the safety functions to an error depends on the error class detected.

There are five different error classes in the SafetyBridge system:

- Critical system and device errors
- Parameterization and configuration errors
- Communication errors
- I/O errors
- Application errors

A distinction is made based on:

- The severity of the error
- The reciprocal effects on other components in the system
- The acknowledgment and restart options

### Acknowledgment

The acknowledgment of an error is an intentional user action (controlled via the application program) with the aim of showing the system (or subsystem) that an error has been removed and that the system (or subsystem) can reactivate the faulty component.

Errors affecting a SafetyBridge island are acknowledged via the handling functional blocks of the IB IL 24 LPSDO 8 V3-PAC (see Section “SafetyBridge V3 system handling in various control systems” on page A-16).

### A 11.1 Critical system or device errors

All errors that are detected and immediately switch the device to the failure state are assigned to this class.

They include:

- Hardware faults (detected by selftests within devices)
- Control flow/program sequence errors within the firmware of a device

Errors in this class are usually errors within the system, the hardware or the firmware, which were not caused by the user and cannot be removed (device-specific exceptions are possible).

It is not possible to acknowledge the error or continue operating. The affected devices can only be restarted via a voltage reset. If the power on selftests are successful following a restart, the system can continue to operate.

### A 11.2 Parameterization or configuration errors

All errors that are detected during the plausibility check of parameters and configuration data are assigned to this class. This check is usually carried out during the initialization phase of the system. Following the detection of an error in this class, the devices enter the safe state and are still able to send diagnostic information or receive new parameter or configuration data.

It is not possible to acknowledge the error or continue operating without modifying the parameter or configuration data of the affected device.

### A 11.3 Communication errors

All errors that can occur within the transmission path between the SafetyBridge components are assigned to this class. They are detected by the safety protocol.

They include, for example:

- Transmission errors
- Data inconsistencies
- Exceeding the transmission time over the set  $T_{FWD}$
- Standard control system in the stop state

After a communication error is detected, the transmitted value assumes the substitute value "0". The affected safety function switches to the safe state. If a communication error is no longer detected, an "operator acknowledge request" is displayed for the user. Once the communication error has been acknowledged, the actual user data is transmitted again.

**NOTE: Acknowledgment of communication errors**

Communication errors may only be acknowledged by an intentional user action (e.g., acknowledgment button). They may not be acknowledged automatically from the application program.

If communication errors occur more than once every 8 hours, the transmission path quality must be improved.

### A 11.4 I/O errors

All errors that can occur and are detected within the I/O devices connected to the safe I/O devices are assigned to this class. They include, for example:

- Short/cross circuits at the inputs or outputs
- Other application-specific errors



These errors are usually indicated in the operating phase of the system. When an error is detected, the affected input or output is disabled and a diagnostic message is sent to the IB IL 24 LPSDO 8 V3-PAC and the standard control system. The standard system remains ready for operation. Ongoing operation of the application depends on the application itself.

I/O errors can be acknowledged individually by the user in the standard application program.

## A 11.5 Application errors

All errors that can occur within the safety logic configured in SAFECONF and can be detected and acknowledged by the safe functional blocks are assigned to this class. They include, for example:

- Implausible signal states at the inputs (e.g., discrepancy error, incorrect muting sequence or static state at the reset input)
- Implausible parameter combinations

## A 12 Startup and restart

### A 12.1 Startup/restart following power up

The module starts up once the configuration and parameterization data record has been downloaded successfully and the internal tests have been completed without errors.



**WARNING: Unexpected machine startup**

If you do not want the machine to start up/restart automatically, configure the safety logic accordingly.

### A 12.2 Restart after triggering a safety function

The SafetyBridge system resets a safety-related output to “1” automatically when the safety function trigger is reset.



**WARNING: Unexpected machine startup**

If you do not want the machine to restart automatically, configure the safety logic accordingly.

## A 13 Memory sizes for the safety logic

The maximum size of the safety logic is 30 kB.

The following guide values can be used as a basis for creating your safety logic:

- Functional block instances: 96

If the safety logic limit has been exceeded, a corresponding error message is displayed by SAFECONF. In this case, reduce the size of your safety logic.

Table A-13 Functional block instances

Functional blocks	Functional block instances		
	3	1	0
MutingPar_2Sensor, MutingPar, MutingSeq	X		
<b>Safety functional blocks:</b> Anitvalent, EDM, EmergencyStop, EnableSwitch, Equivalent, ESPE, GuardLocking, GuardMonitoring, ModeSelector, Reset, TestableSafetySensor, TwoHandControlTypeII, TwoHandControlTypeIII		X	
<b>Safety functions:</b> CTUD, F_TRIG, PULSE_GEN, R_TRIG, RS, SR, TOF, TON, TP		X	
<b>Standard functions:</b> CTUD, F_TRIG, PULSE_GEN, R_TRIG, RS, SR, TOF, TON, TP		X	
<b>Logic functions:</b> AND, EN_OUT, EQ, NOT_EQ, NOT, OR, XOR			X

## B Appendix: checklists

The checklists listed in this section provide support during the planning, assembly and electrical installation, startup, parameterization, and validation of the IB IL 24 LPSDO 8 V3-PAC module.



These checklists may be used as planning documentation and/or as verification to ensure the steps in the specified phases are carried out carefully.

Archive the completed checklists to use as reference for recurring tests.

The checklists do not replace the validation, initial startup, and regular testing performed by qualified personnel.

The following section of a checklist shows an example of a completed checklist.

Checklist . . .			
<b>Device type/equipment identification</b>		IB IL 24 LPSDO 8 V3-PAC/BK20NA10	
<b>Version: HW/FW/FW</b>	00/100/100	<b>Date</b>	2011-03-01
<b>Author</b>	John Smith	<b>Test engineer</b>	Jane Brown
<b>Remark</b>	System XXX has been checked for engine hood production		
<b>No.</b>	<b>Requirement (mandatory)</b>	<b>Yes</b>	<b>Remark</b>
X	...	<input type="checkbox"/>	
<b>No.</b>	<b>Requirement (optional)</b>	<b>Yes</b>	<b>No</b> <b>Remark</b>
Y	...	<input type="checkbox"/>	<input type="checkbox"/>

Key:

Equipment identification	Enter the device type and/or the equipment identification for the relevant device.
Version: HW/FW/FW	Enter the hardware and firmware version of the device (see Section “Structure of the safety module” on page 2-2).
Date	Enter the date on which you began to fill in this checklist.
Author/Test engineer	Enter the names of the author and the test engineer.
Remark	Enter a remark, if necessary.
Requirement (mandatory)	These requirements must be met for a safety application, in order to complete the relevant phase using the checklist.
Requirement (optional)	These requirements are optional. For points that are not met, please enter an appropriate remark in the relevant field.

## B 1 Checklists for the SafetyBridge system

### B 1.1 Planning

Checklist for planning the use of the SafetyBridge system			
<b>Equipment identification</b>			
		<b>Date</b>	
<b>Author</b>		<b>Test engineer</b>	
<b>Remark</b>			
No.	Requirement (mandatory)	Yes	Remark
1	Has a hazard and risk analysis been carried out for the system/machine?	<input type="checkbox"/>	
2	Has the corresponding safety integrity level (SIL, SIL CL, Cat., PL) been derived from the hazard and risk analysis?	<input type="checkbox"/>	
3	Does the SafetyBridge system meet the required safety integrity level?	<input type="checkbox"/>	
4	Has the current IB IL 24 LPSDO 8 V3-PAC user manual been used as the basis for planning?	<input type="checkbox"/>	Revision:
5	Has the voltage supply been planned according to the specifications for the protective extra-low voltage in accordance with PELV?	<input type="checkbox"/>	
6	Have safety distances that must be observed been calculated according to the response and delay times implemented?	<input type="checkbox"/>	
7	Has the required shutdown time for the safety function $t_{SF}$ resulting from the machine/system design been determined?	<input type="checkbox"/>	$t_{SF}$ :
8	Can the planned application be implemented with the configuration options (e.g., by using functional blocks)?	<input type="checkbox"/>	
9	Does the planned use correspond to the intended use of the system?	<input type="checkbox"/>	
10	Has the technical data of the SafetyBridge system been observed?	<input type="checkbox"/>	
11	Has it been ensured that in an overall system consisting of the SafetyBridge system and any higher-level PROFIsafe system, the addresses (address within the SafetyBridge system and F-Address of the PROFIsafe system) are unique?	<input type="checkbox"/>	
12	Within a SafetyBridge system, is each island number only assigned once? (During simultaneous use of SafetyBridge V1/V2 and SafetyBridge V3, the island number of the SafetyBridge V3 system must be $\geq 8$ .)	<input type="checkbox"/>	
13	Is the application stop (OFF, STOP, emergency stop, triggering of safety equipment) implemented according to EN 60204?	<input type="checkbox"/>	
14	When planning the safety functions, has the SAFECONF software tool been used to determine whether the memory space is sufficient for the size of the safety logic?	<input type="checkbox"/>	
15	Has it been ensured that any person intentionally starting hazardous movements has a direct view of the danger zone?	<input type="checkbox"/>	
16	Are there fewer than 6 serial chains between the logic modules within a safety function?	<input type="checkbox"/>	

No.	Requirement (optional)	Yes	No	Remark
17	Are all measures that are based on applicable standards planned?	<input type="checkbox"/>	<input type="checkbox"/>	
18	Have the Inline specifications (e.g., cabling, power supply) been observed?	<input type="checkbox"/>	<input type="checkbox"/>	
19	Have the accessories to be used been planned (e.g., cables, plugs)?	<input type="checkbox"/>	<input type="checkbox"/>	
20	Is the transmission speed for the individual Inline stations specified?	<input type="checkbox"/>	<input type="checkbox"/>	
21	Are the specifications for parameterization, assembly, electrical installation, startup, and validation of the IB IL 24 LPSDO 8 V3-PAC described?	<input type="checkbox"/>	<input type="checkbox"/>	
22	Are the specifications for parameterization, assembly, electrical installation, startup, and validation of the satellites described?	<input type="checkbox"/>	<input type="checkbox"/>	
23	Is the assignment of responsibility specified (e.g., for assembly/installation/configuration, parameterization/startup/validation, etc.)?	<input type="checkbox"/>	<input type="checkbox"/>	Name/company:
24	Are measures planned which prevent hazardous states in each phase (e.g., specification of individual steps in the procedure for each phase)?	<input type="checkbox"/>	<input type="checkbox"/>	
25	Is monitoring of the actuators and sensors controlled/requested by the SafetyBridge system planned (e.g., reading of outputs)?	<input type="checkbox"/>	<input type="checkbox"/>	
		Date		Signature (author)
		Date		Signature (test engineer)

**B 1.2 Configuration and parameterization**

Checklist for configuration and parameterization of the SafetyBridge system				
<b>Equipment identification</b>				
		<b>Date</b>		
<b>Author</b>		<b>Test engineer</b>		
<b>Remark</b>				
No.	Requirement (mandatory)	Yes	Remark	
1	Has the safety logic been configured?	<input type="checkbox"/>		
2	Have all inputs and outputs been fully and correctly parameterized?	<input type="checkbox"/>		
3	Are standard input signals exclusively used to configure standard operations (e.g., for the enable principle using the EN_OUT block or for acknowledgment)?	<input type="checkbox"/>		
4	Has it been ensured that in the overall system consisting of SafetyBridge and any higher-level PROFIsafe system, the addresses (address within the SafetyBridge system and F-Address of the PROFIsafe system) are unique?	<input type="checkbox"/>		
5	Has watchdog time $t_{FWD}$ been set for each satellite according to the application?	<input type="checkbox"/>		
6	Has the correct terminal point been assigned to the correct signal?	<input type="checkbox"/>		
7	Is the island address set correctly?	<input type="checkbox"/>		
8	For IB IL 24 LPSDO 8 V3-PAC outputs that are parameterized for two-channel operation, are both channels parameterized correctly for each other?	<input type="checkbox"/>		
9	For satellite inputs that are parameterized for two-channel operation, are both channels parameterized correctly for each other?	<input type="checkbox"/>		
10	For satellite outputs that are parameterized for two-channel operation, are both channels parameterized correctly for each other?	<input type="checkbox"/>		
11	Has the switch-off delay for stop category 1 been observed in the calculation of the total response time for the machine/system?	<input type="checkbox"/>		
12	Has prevention of undesired startup/restart been configured?	<input type="checkbox"/>		
13	Has it been ensured that an operator acknowledgment can only be executed by an intentional user action? (Not configured as "automatic".)	<input type="checkbox"/>		
14	Has the checklist/project information been processed in SAFECONF ("Project... Project Info" menu item)?	<input type="checkbox"/>		
No.	Requirement (optional)	Yes	No	Remark
15		<input type="checkbox"/>	<input type="checkbox"/>	
		Date		Signature (author)
		Date		Signature (test engineer)

### B 1.3 Startup

Checklist for startup of the SafetyBridge system				
<b>Equipment identification</b>				
		<b>Date</b>		
<b>Author</b>		<b>Test engineer</b>		
<b>Remark</b>				
No.	Requirement (mandatory)	Yes		Remark
1	During startup, is it ensured that any person starting hazardous movements intentionally can only do so with a direct view of the danger zone?	<input type="checkbox"/>		
No.	Requirement (optional)	Yes	No	Remark
2	Are startup specifications applicable?	<input type="checkbox"/>	<input type="checkbox"/>	
3	If applicable, have startup specifications been met?	<input type="checkbox"/>	<input type="checkbox"/>	
		Date		Signature (author)
		Date		Signature (test engineer)

### B 1.4 Safety functions

Enter all the safety functions for your application in this checklist.

Checklist for checking safety functions			
Equipment identification			
		Date	
Author		Test engineer	
Remark			
No.	Safety functions	Yes	Remark
1		<input type="checkbox"/>	
2		<input type="checkbox"/>	
3		<input type="checkbox"/>	
4		<input type="checkbox"/>	
5		<input type="checkbox"/>	
6		<input type="checkbox"/>	
7		<input type="checkbox"/>	
8		<input type="checkbox"/>	
9		<input type="checkbox"/>	
10		<input type="checkbox"/>	
11		<input type="checkbox"/>	
12		<input type="checkbox"/>	
13		<input type="checkbox"/>	
14		<input type="checkbox"/>	
15		<input type="checkbox"/>	
16		<input type="checkbox"/>	
		Date	Signature (author)
		Date	Signature (test engineer)



## B 1.5 Validation

Checklist for validating the SafetyBridge system				
<b>Equipment identification</b>				
		<b>Date</b>		
<b>Author</b>		<b>Test engineer</b>		
<b>Remark</b>				
No.	Requirement (mandatory)	Yes	Remark	
1	Have the mandatory requirements for planning been met?	<input type="checkbox"/>		
2	If applicable, have the mandatory requirements for startup been met?	<input type="checkbox"/>		
3	Has validation of the safe devices used been carried out and are the results available?	<input type="checkbox"/>		
4	Have safety distances that must be observed been calculated according to the response and delay times implemented?	<input type="checkbox"/>		
5	Have all the safety functions been checked successfully?	<input type="checkbox"/>		
6	Do all the islands in the system have different island addresses?	<input type="checkbox"/>		
7	Has it been ensured that in the overall system consisting of SafetyBridge and any higher-level PROFIsafe system, the addresses (address within the SafetyBridge system and F-Address of the PROFIsafe system) are unique?	<input type="checkbox"/>		
8	Has the SAFECONF project been printed with the project information (name, CRC, time stamp, etc.)?	<input type="checkbox"/>		
9	Has the CRC of the SAFECONF project printout been compared with the CRC of the loaded project header and do they match?	<input type="checkbox"/>		
No.	Requirement (optional)	Yes	No	Remark
10	Are the directives and standards used listed in the declaration of conformity?	<input type="checkbox"/>	<input type="checkbox"/>	
11	Has the safety logic created in SAFECONF been packed and archived? Enter the archiving location (e.g., drive or cabinet) in the "Remark" column.	<input type="checkbox"/>	<input type="checkbox"/>	
12	Has a complete printout of the safety logic configured in SAFECONF been stored for the system?	<input type="checkbox"/>	<input type="checkbox"/>	
13	Have all fully completed checklists been stored for the system?	<input type="checkbox"/>	<input type="checkbox"/>	
		Date		Signature (author)
		Date		Signature (test engineer)

## B 2 Checklists for the IB IL 24 LPSDO 8 V3-PAC module

### B 2.1 Planning

Checklist for planning the use of the safety module				
<b>Device type/equipment identification</b>				
<b>Version: HW/FW/FW</b>		<b>Date</b>		
<b>Author</b>		<b>Test engineer</b>		
<b>Remark</b>				
No.	Requirement (mandatory)	Yes	Remark	
1	Has the current module user manual been used as the basis for planning?	<input type="checkbox"/>	Revision:	
2	Does the planned use correspond to the intended use?	<input type="checkbox"/>		
3	Has the technical data of the module been observed?	<input type="checkbox"/>		
4	Are the actuators approved for connection to the module (according to the technical data and parameterization options)?	<input type="checkbox"/>		
5	Has the voltage supply been planned according to the specifications for the protective extra-low voltage in accordance with PELV?	<input type="checkbox"/>		
6	Has the power supply of $U_M$ and $U_S$ from a power supply unit been planned?	<input type="checkbox"/>		
7	Is external protection of the module planned (according to the specifications in this user manual for supply voltage $U_M$ )?	<input type="checkbox"/>		
8	Is use in a control cabinet (IP54) planned?	<input type="checkbox"/>		
9	Are measures planned to prevent simple manipulation?	<input type="checkbox"/>		
10	Are measures planned to prevent plugs being mixed up?	<input type="checkbox"/>		
11	Are requirements for the actuators and cable installation observed according to the SIL/SIL CL/Cat./PL to be achieved and is the corresponding implementation planned?	<input type="checkbox"/>		
12	Are the specifications for the address assignment for the islands specified?	<input type="checkbox"/>		
13	Are the specifications for the parameterization for each channel specified?	<input type="checkbox"/>		
14	Are test intervals specified for testing the shutdown capability of the actuators, if this is required to achieve a SIL/SIL CL/Cat./PL?	<input type="checkbox"/>		
15	Has it been ensured that any person intentionally starting hazardous movements can only do so with a direct view of the danger zone?	<input type="checkbox"/>		
16	Have test intervals been defined?	<input type="checkbox"/>		
17	Has the switch-off delay for stop category 1 been observed in the calculation of the total response time for the machine/system?	<input type="checkbox"/>		
No.	Requirement (optional)	Yes	No	Remark
18	Have specifications for assembly and electrical installation been defined (e.g., EPLAN) and communicated to the relevant personnel?	<input type="checkbox"/>	<input type="checkbox"/>	
19	Have specifications for startup been defined and communicated to the relevant personnel?	<input type="checkbox"/>	<input type="checkbox"/>	
		Date		Signature (author)
		Date		Signature (test engineer)

## B 2.2 Assembly and electrical installation

Checklist for assembly and electrical installation of the safety module				
<b>Device type/equipment identification</b>				
<b>Version: HW/FW/FW</b>		<b>Date</b>		
<b>Author</b>		<b>Test engineer</b>		
<b>Remark</b>				
No.	Requirement (mandatory)	Yes	Remark	
1	Was assembly and installation completed according to the specifications (specifications from the planning phase or according to the user manual)?	<input type="checkbox"/>		
2	Was the safety module installed in the control cabinet (IP54)?	<input type="checkbox"/>		
3	Do the cable cross sections correspond to the specifications?	<input type="checkbox"/>		
4	Are requirements for the actuators and cable installation observed according to the SIL/SIL CL/Cat./PL to be achieved and is the corresponding implementation observed?	<input type="checkbox"/>		
5	If error prevention (e.g., cross circuit to external signals) has been defined: have the conditions for error prevention been implemented?	<input type="checkbox"/>		
6	Is the transmission speed set correctly according to the specifications?	<input type="checkbox"/>		
7	Is the operating mode set correctly according to the specifications?	<input type="checkbox"/>		
8	Is the address set correctly according to the specifications?	<input type="checkbox"/>		
No.	Requirement (optional)	Yes	No	Remark
9		<input type="checkbox"/>	<input type="checkbox"/>	
		Date		Signature (author)
		Date		Signature (test engineer)

**B 2.3 Startup**

Checklist for startup of the safety module				
<b>Device type/equipment identification</b>				
<b>Version: HW/FW/FW</b>		<b>Date</b>		
<b>Author</b>		<b>Test engineer</b>		
<b>Remark</b>				
No.	Requirement (mandatory)	Yes	Remark	
1	Was startup completed according to the specifications (specifications from the planning phase or according to the user manual)?	<input type="checkbox"/>		
2	During startup, is it ensured that any person starting hazardous movements intentionally can only do so with a direct view of the danger zone?	<input type="checkbox"/>		
3	Have safety distances that must be observed been calculated according to the response and delay times implemented?	<input type="checkbox"/>		
No.	Requirement (optional)	Yes	No	Remark
4		<input type="checkbox"/>	<input type="checkbox"/>	
		Date	Signature (author)	
		Date	Signature (test engineer)	

## B 2.4 Validation

Checklist for validating the safety module			
<b>Device type/equipment identification</b>			
<b>Version: HW/FW/FW</b>		<b>Date</b>	
<b>Author</b>		<b>Test engineer</b>	
<b>Remark</b>			
No.	Requirement (mandatory)	Yes	Remark
1	Have all the mandatory requirements for the "Planning" checklist been met?	<input type="checkbox"/>	
2	Have all the mandatory requirements for the "Assembly and electrical installation" checklist been met?	<input type="checkbox"/>	
3	Have all the mandatory requirements for the "Startup" checklist been met?	<input type="checkbox"/>	
4	Does the parameterization of the safe outputs correspond to the version and the actual connection of the controlled device?	<input type="checkbox"/>	
5	Has the assignment of the actuators to the safety logic outputs been checked?	<input type="checkbox"/>	
6	Has a function test been performed to check all safety functions, in which the module is involved?	<input type="checkbox"/>	
7	Have measures been taken to achieve a specific Cat.?	<input type="checkbox"/>	
8	Do all cables correspond to the specifications?	<input type="checkbox"/>	
9	Does the voltage supply correspond to the specifications for the protective extra-low voltage in accordance with PELV?	<input type="checkbox"/>	
10	Has the power supply of $U_M$ and $U_S$ in the Inline system from a power supply unit been implemented?	<input type="checkbox"/>	
11	Is external protection of the module implemented (according to the specifications in this user manual for supply voltage $U_M$ )?	<input type="checkbox"/>	
12	Have measures been taken to prevent simple manipulation?	<input type="checkbox"/>	
13	Have measures been taken to prevent plugs being mixed up?	<input type="checkbox"/>	
14	Are the requirements for the actuators and cable installation observed according to the SIL/SIL CL/Cat./PL to be achieved?	<input type="checkbox"/>	
15	Are the specifications for the parameterization for each channel implemented?	<input type="checkbox"/>	
16	Are test intervals specified for testing the shutdown capability of the actuators, if this is required to achieve a SIL/SIL CL/Cat./PL?	<input type="checkbox"/>	
17	Has it been ensured that any person intentionally starting hazardous movements can only do so with a direct view of the danger zone?	<input type="checkbox"/>	
		Date	Signature (author)
		Date	Signature (test engineer)

# C Appendix: revision history

Revision	Date	Contents
00	2013-04-03	First publication